


# Fitting Instructions

## Lower Control Arm Bushes

**N.B:** These instructions should be used in conjunction with workshop manual.

1. Support the vehicle and remove control arm and torque shaft as recommended in the workshop manual.
2. Remove support extension shaft from control arm and discard inner steel tube from the rubber bush. Remove from centre of the control arm but be sure to leave outer steel sleeve from the rubber bush intact in the arm.
3. Clean all rubber deposits from inside the sleeve and hone with abrasive tape to a smooth finish.
4. Slide washer supplied in the kit onto the support extension shaft and then press bush onto the nose of the shaft until it locks the washer against the stepped shoulder on the shaft.
5. Lubricate the inside of the steel sleeve and install assembled bush and extension shaft into the control arm.
6. Reassemble suspension as recommended in workshop manual.
7. Tighten all components to manufactures recommended torque settings.

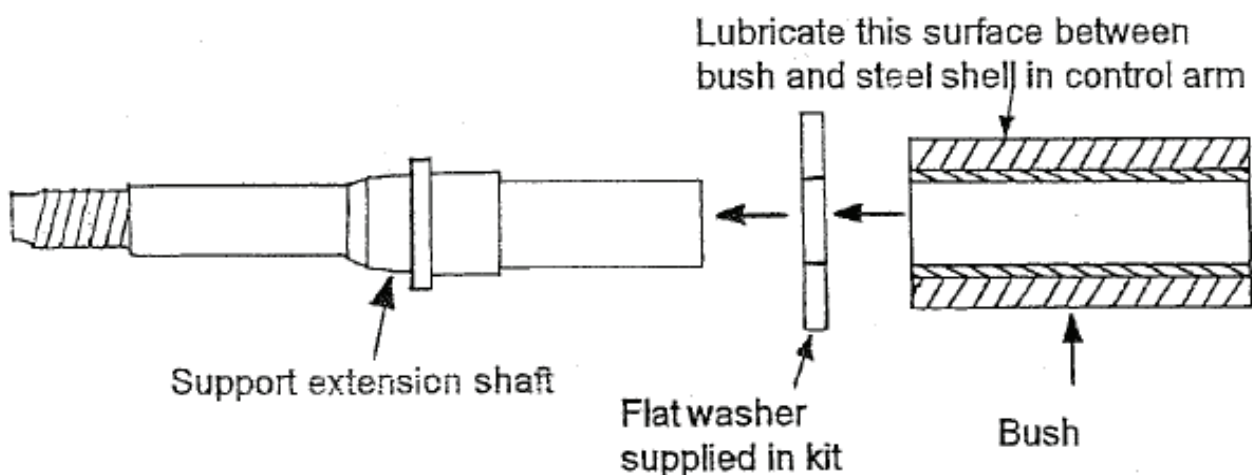

**NOTE: IT IS RECOMMENDED THAT THE ABOVE PROCEDURE IS CARRIED OUT BY A LICENCED WORKSHOP OR TRADESPERSON**