

Installation Guide

Front Lower Control Arm - Rear Bush

Left Hand Offset Kit


Z 5037

Suits: Nissan Pulsar - 07/00 - 01/06


(Always refer to the current catalogue for complete application listings)

N.B: This installation guide should be used in conjunction with the workshop manual.
All fastener torque settings should be adhered to.

NOTE: Offset hole in bush
to outboard position
Timing Mark to 12 o'clock

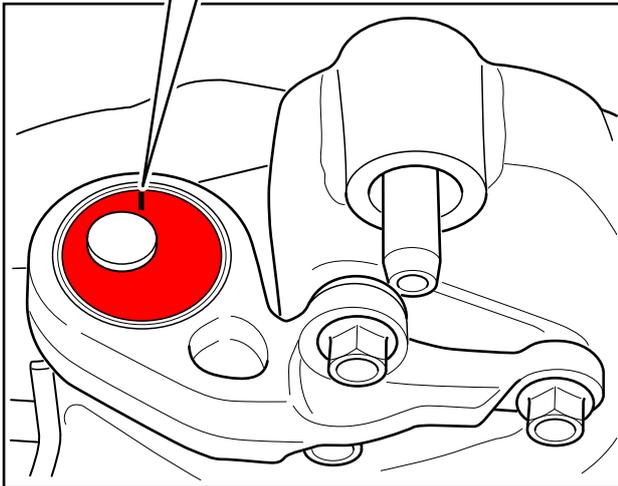

**LEFT HAND MOUNT
VIEWED FROM REAR OF VEHICLE
5499 OFFSET BUSH**

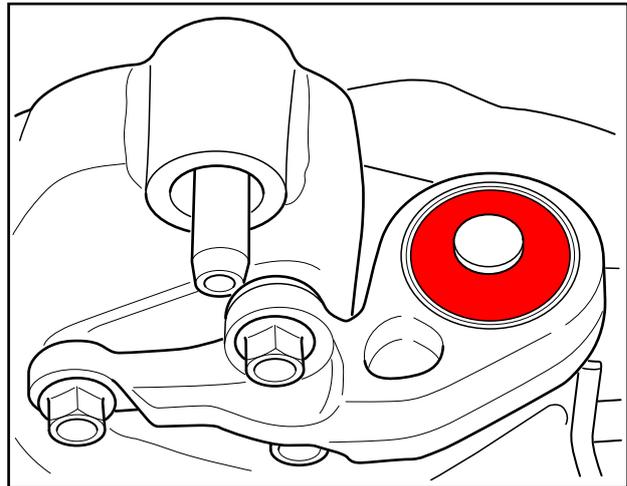

**RIGHT HAND MOUNT
VIEWED FROM REAR OF VEHICLE
5498 STANDARD BUSH**

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.