

ARB TOURING AWNING

PART No 3700200 UNIVERSAL AWNING KIT


USE	PART No	QTY	DESCRIPTION
ATTACHING ARB TOURING AWNING TO ROOF CAGE	3756711	3	AWNING BRACKET UNIVERSAL
	6151184	6	BOLT M8 x 30mm CAP SCREW S/S
	4581094	6	WASHER M8 SPRING S/STEEL
	4581081	6	WASHER M8 FLAT S/STEEL
	4581072	6	WASHER M6 FLAT

PART No 3721200 TOYOTA PRADO 03 ON AWNING KIT


USE	PART No	QTY	DESCRIPTION
ATTACHING ARB TOURING AWNING TO ROOF CAGE	3756718	3	AWNING BRACKET PRADO
	6151184	6	BOLT M8 x 30mm CAP SCREW S/S
	4581094	6	WASHER M8 SPRING S/STEEL
	4581081	6	WASHER M8 FLAT S/STEEL
	4581072	6	WASHER M6 FLAT

TOOLS REQUIRED, 10mm spanner, 6mm Allen key

1. Choose which side of the vehicle you wish to mount the awning.
2. Remove the six retaining bolts attaching the roof cage to the mounting brackets along the side chosen for the awning. (fig.1) Discard the bolts but retain the three nut plates.

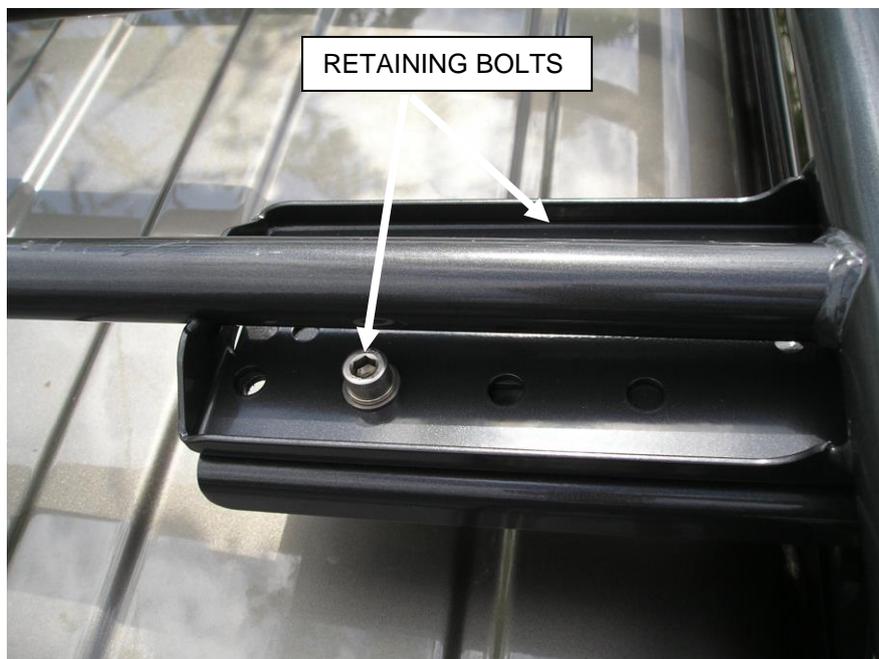

- Carefully lift the roof cage clear of the mounting brackets and slide the awning brackets between the two. (fig.2)

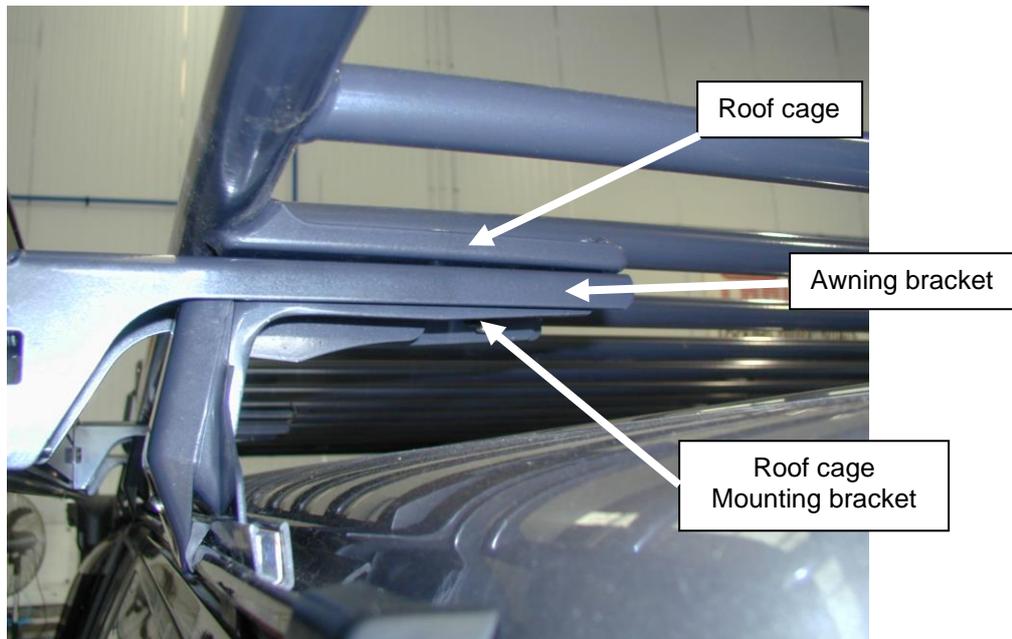

- Using the M8 x 30mm bolts, M8 flat and spring washers supplied with awning kit and the nut plates removed in step 2, re-attach the roof cage to the mounting brackets. Do not tighten.
- Six M6 bolts are supplied with the awning. Slide these bolts into the bottom two channels of the awning (three each channel) and position them approximately the same distance apart as the awning brackets.
- With the help of another person, lift the awning onto the brackets positioning the bolts as necessary.
- Using the flat washers supplied in the kit and the nuts supplied with the awning, attach the awning to the vehicle. Do not tighten.
- Position the awning in the desired position so that it won't interfere with doors, adjust the awning brackets so they are evenly spaced from the rack and tighten all bolts.

