

Product Code Number: CRM19-2, RME17-2

### REMOVABLE MOUNT ROOF RACKS

Maximum Carrying Capacity:

**80 kg**

#### STEP 1: Fitting End Support to Cross-bar

NOTE: Your purchased kit contains either the "Commercial Series" parts or the "Sports Series" parts. Please refer to diagrams on the right.

- Insert End Support into Cross-bar.
- Insert Nut into Bottom Slug and then slide both components into the cross-bar.
- Loosely fasten using Bolt, Spring Washer and Flat Washer. Assemble as shown in Fig. 1
- Fit End Cap to each end of cross-bar.

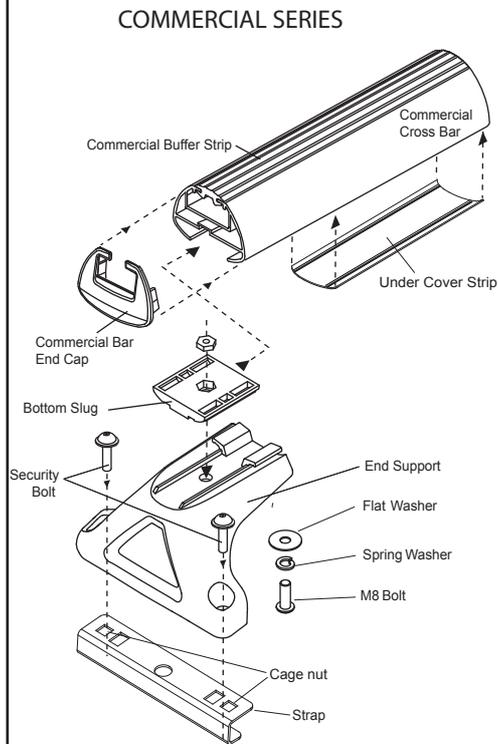


Fig.1a.

#### SPORTS SERIES

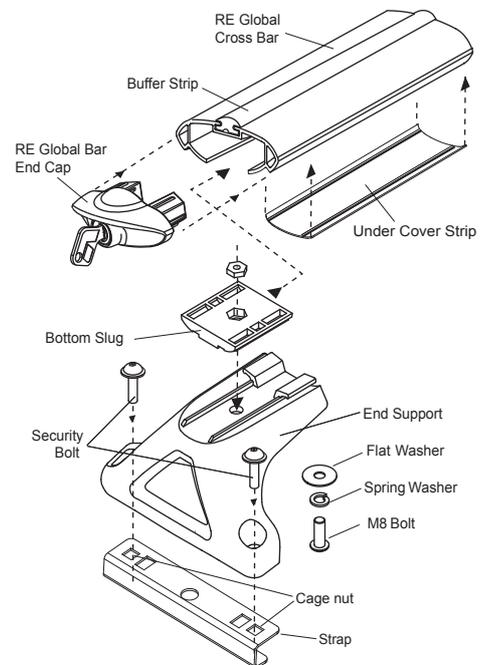


Fig.1b.

#### STEP 2: Placement Of Locking Straps

- Locate Anchor points on vehicle roof (Fig. 2.a). Unscrew existing button head bolts with the Red Key supplied, to reveal threaded Anchor points.
- Locate the Rubber Washer and Retaining Strap over the Anchor Point.
- Use the M8x20mm Button head bolts and Spring Washers supplied to secure Retaining Strap to each Anchor Point (Fig.2.b). Tighten Bolts with Red key provided, to secure Retaining Strap to vehicle. A firm hand tightness is adequate.

Fig 2a Anchor Points are indicated by arrows


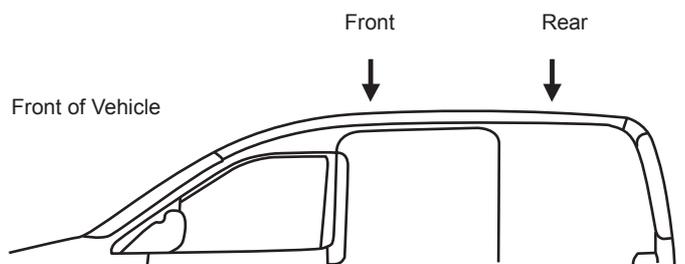


Fig 2b

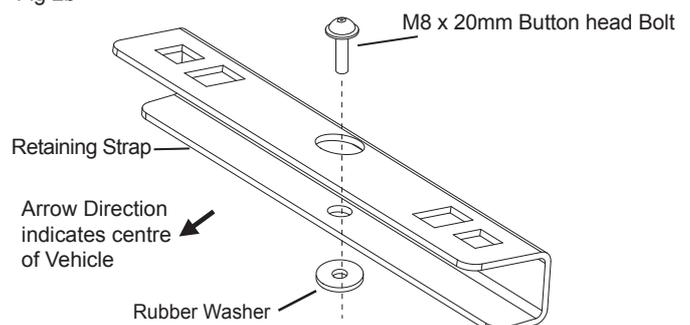

### STEP 3: Fitting Cross Bar to Vehicle

A. Place Cross Bar Assembly onto appropriate Retaining Straps and align end supports. Loosely fit M6x20mm Security Bolts through End Support and engage Cage Nut. Tighten two or three turns with Security Key provided. Go to other side of the Vehicle and fit other End Support the same (Fig.3.a).

B. Measure overhang of Cross Bar past end support and adjust Cross Bar till it equally overhangs on either End Support. Tighten End Support M8 Hex head Bolts. Ensure all other bolts have been adequately tightened.

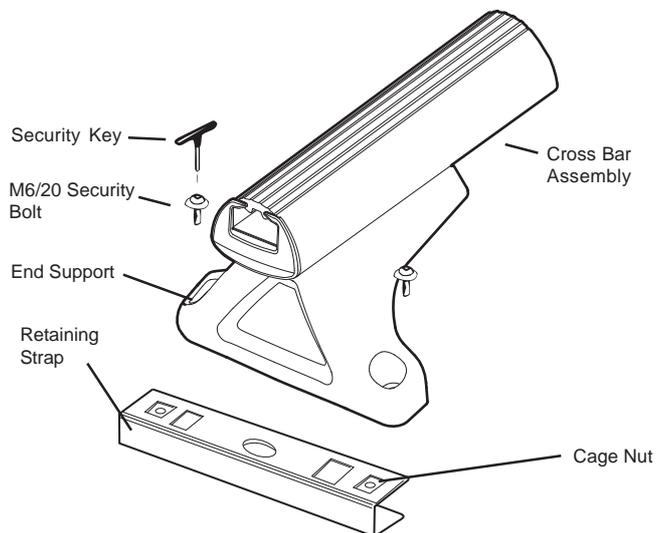


Fig. 3a.

### STEP 4: Measuring Undercover Strip

A. Using a tape measure, obtain a size for Dimension X (Fig.4).

B. With the Undercover Strip on a flat surface, mark and cut the length obtained in Step A; using strong scissors.

**Note:** Caution should be taken when using sharp blades.

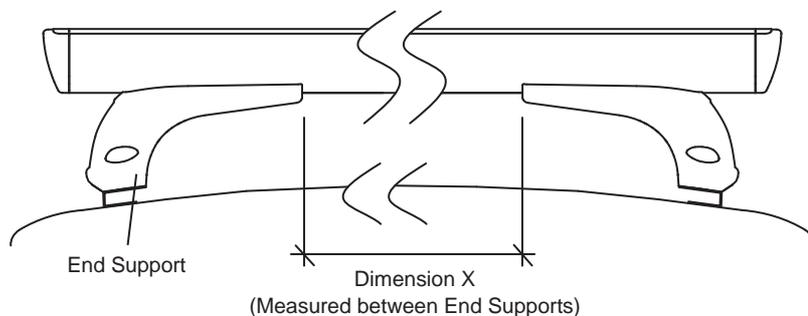


Fig. 4

### STEP 5: Fitting Undercover Strip

A. Place one side of the Undercover Strip into the position under the Cross Bar as shown (Fig.5.a)

B. Apply pressure along the opposite edge of the Undercover Strip until the whole length is clipped securely into position (Fig.5.b).

Undercover Strip fitted to one side of Cross Bar.



Fig. 5.a

Undercover Strip fitted and secure to Cross Bar.



Fig. 5.b

