


Please read all instructions carefully before assembly, installation and/or use of this product.


- WARNING:** The Maximum basket content weight capacity is **60 Kg**.
DO NOT EXCEED the lowest of vehicle manufacturer's cross bar rating or basket content weight limit of **60 Kg**.
- WARNING:** Not for transport of people, animals, or flammable liquids.
- WARNING:** Distribute your load evenly inside the basket.
- WARNING:** Securely fasten load to cargo carrier. Make sure all bolts, screws, straps and plastic knobs are firmly attached before every trip and check regularly during the trip.
- WARNING:** Check security of all cargo carrier attachments and load at fuel and rest stops.
- WARNING:** Check for clearance between sunroof and cargo carrier before operating sunroof. (if equipped)
- WARNING:** Do not carry any loads wider than your vehicle.
- WARNING:** Do not drill or weld to this product.

Vehicle Manufacturer's cross bar rating

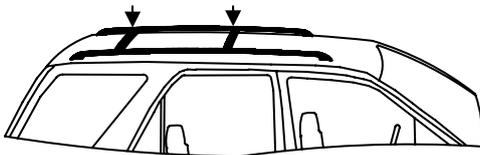


LOAD RATING LIMITS:

Basket Weight (17 Kg)

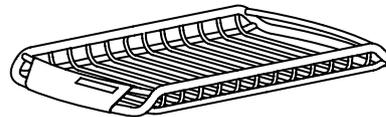

= Cargo Carrier Weight Limit

PARTS LIST:

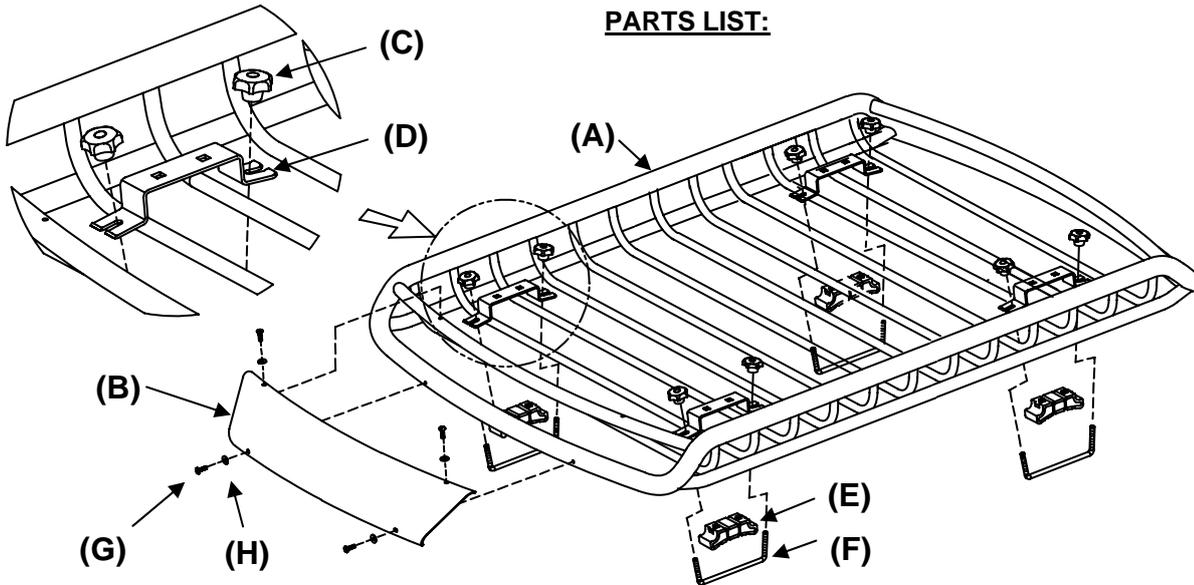


PART	DESCRIPTION	QTY.
A	Cargo Carrier Basket	1
B	Air Deflector	1
C	Plastic Knob	8
D	Top Mounting Bracket	4
E	Spacer Block	4
F	U-Bolt	4
G	Screw, #10-32 (Self Tapping)	4
H	Rubber Washer	4


TOOLS REQUIRED:
Phillips Screwdriver
Tape Measure

Please read all instructions carefully before assembly, installation and/or use of this product.

1

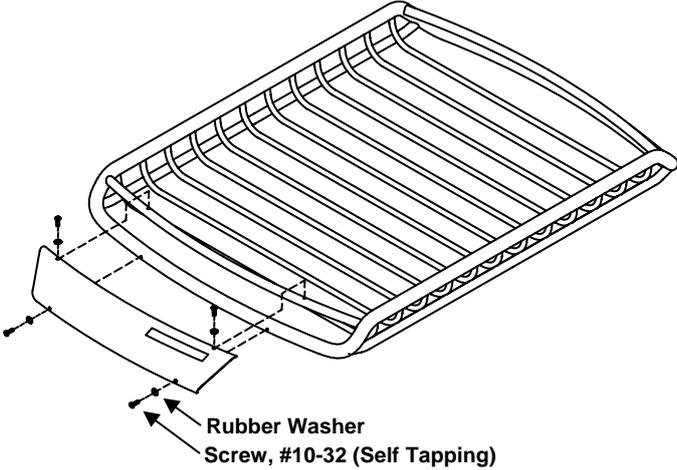


Rubber Washer
Screw, #10-32 (Self Tapping)

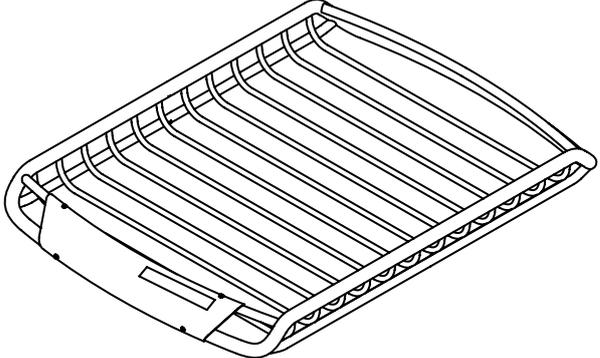

ATTACH AIR DEFLECTOR

- Line up the holes in air deflector with the four holes in the front cross tubes of cargo carrier basket. Install four #10 self-tapping screws with rubber washers as shown. Tighten screws until the rubber washers start to compress – **DO NOT OVER TIGHTEN!**

2

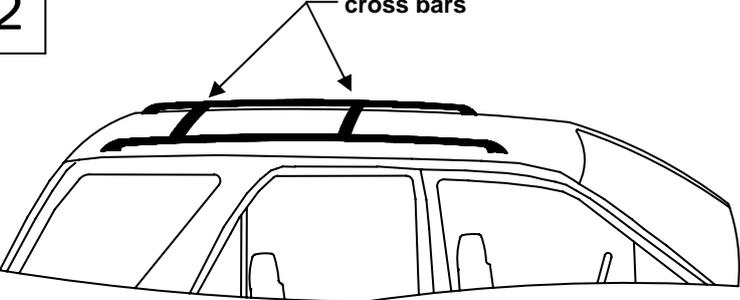

cross bars

POSITION CROSS BARS



- Adjust your cross bars to one of (4) four available settings:
- 953mm center to center
- 857mm center to center
- 762mm center to center
- 667mm center to center – **Minimum**
- NOTE: It is recommended to use the widest setting for optimum load distribution.**
- Leave cross bars loose at this step.

Please read all instructions carefully before assembly, installation and/or use of this product.


3

INSERT SPACER BLOCKS

- Insert the spacer blocks into cargo basket in the position that matches the cross bar spacing set in step 3:
- POSITION 1 (953mm)
- POSITION 2 (857mm)
- POSITION 3 (762mm)
- POSITION 4 (667mm)
- **NOTE: Locate the spacer blocks in the widest position possible.**
 (The location of spacer blocks varies by vehicle.)
- **WARNING: The minimum fore/aft distance between the spacer blocks is 667mm.**

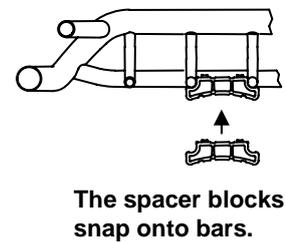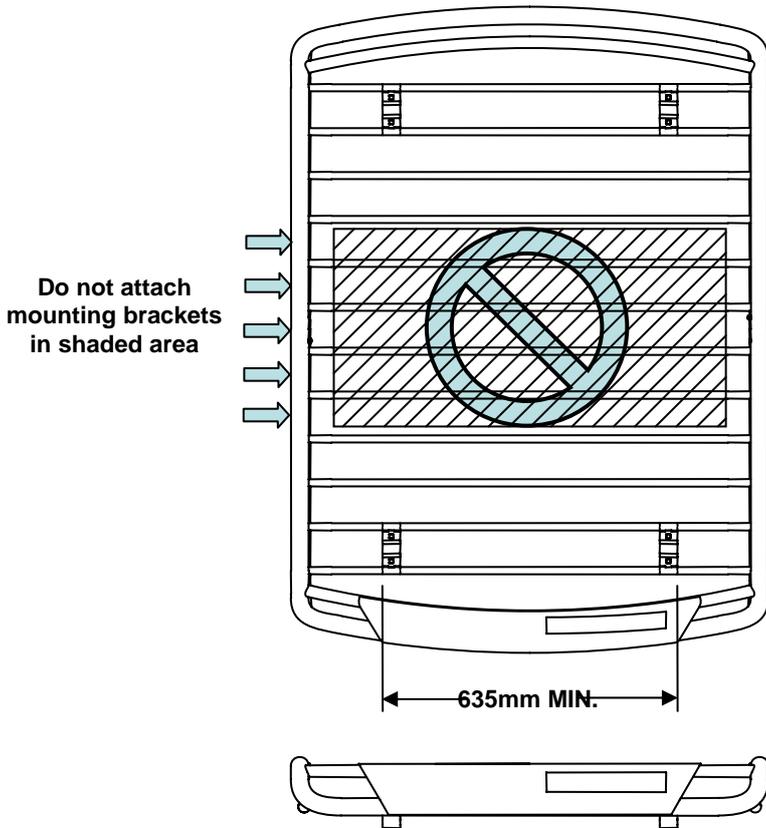


4

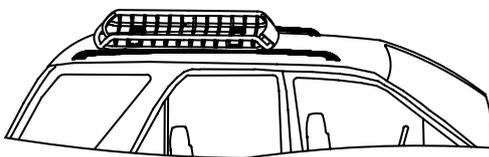

LOAD BASKET ONTO VEHICLE CROSS BARS

- Center basket over your vehicle's cross bars so that the spacer blocks rest on top of cross bars.
- Check and adjust cross bars so they are centered with spacer blocks.
- Adjust the side-to-side position of spacer blocks so that they are centered in the cargo basket and a minimum of 635mm apart (see diagram above).
- **DO NOT** locate spacer blocks on top of cross bar brackets (if applicable).

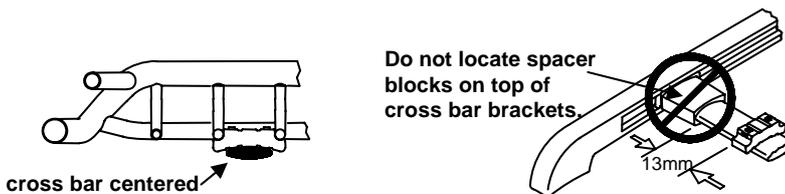

Please read all instructions carefully before assembly, installation and/or use of this product.

5

ATTACH MOUNTING CLAMPS

- Place mounting brackets on top of each spacer block. The square holes in brackets must engage the squares on spacer blocks.
- Install u-bolts around cross bars and into slots in mounting brackets.
- Install plastic knobs onto u-bolts.
- Tighten all plastic knobs firmly and evenly.

WARNING: There must be a minimum of 12mm of threads engaged on u-bolt on all plastic knobs.

INCORRECT

CORRECT

Refer to Supplementary fitting instructions

6

CHECK INSTALLATION

- Check clearance between cargo carrier and your vehicle's hatch.
- With vehicle cross bars loose, position the carrier to clear hatch.
- Tighten vehicle's cross bars.
- Make sure installation is secure by pulling side-to-side and fore and aft on basket.

NOTE: The cargo carrier should not move on cross bars when plastic knobs are tightened properly.

CAUTION: Interference may be unavoidable on some vehicles.

- Longer loads, such as canoes or kayaks, must be tied down to the front and rear of vehicle.**

CAUTION:

- As with any metal equipment it is recommended that you keep the units clean and remove road salt and debris.
- Do not allow harsh chemicals, road salt, or mud to accumulate on the product for an extended period of time.
- Wash the product with mild soap and water only and a non-abrasive cloth.

For questions regarding replacement parts, the compatibility, fitting and/or use of this rack, please call your nearest ROLA™ authorized retail dealer or Cequent Consumer Products Customer Service.