


# Fitting Instructions

## Lower Control Arm Bush

1. Support vehicle and disconnect upper ball joint, radius rod and sway bar link rod.
2. Remove lower wishbone.
3. Press out old bushing from wishbone and inspect arms for any sign of wear or cracking. If arm is damaged – replace it.
4. Fit shelled bushes and press to **swage mark** on bush shank  
**Take care to support the arm around each eye to minimise damage to arms.**

**NOTE: Holden wishbones suffer from stretching of the eyes especially if a spacer is not used at installation.**

5. Lubricate end faces of bushes with grease provided before installing wishbone.
6. Reassemble suspension as recommended in workshop manual.
7. Tighten all components to manufactures recommended torque settings.

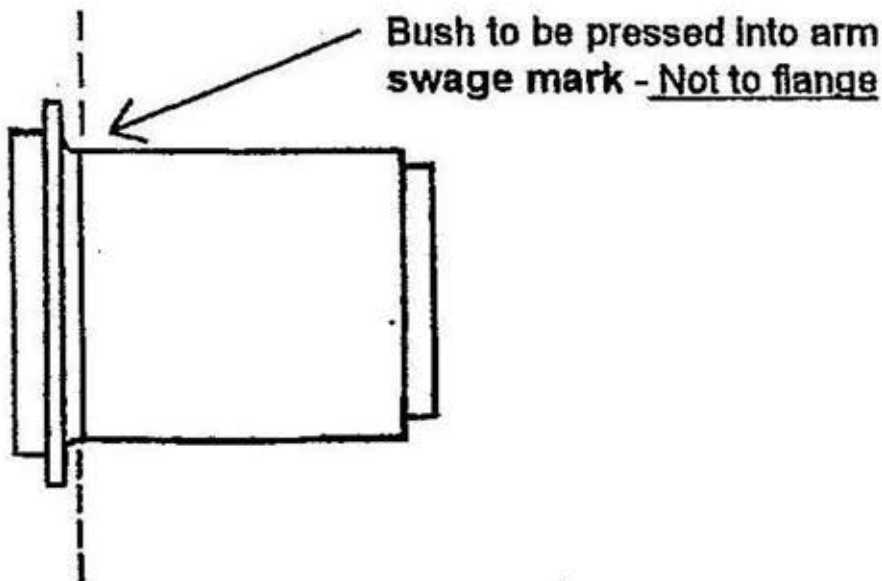

**NOTE: IT IS RECOMMENDED THAT THE ABOVE PROCEDURE IS CARRIED OUT BY A LICENCED WORKSHOP OR TRADESPERSON**