

Instruction Sheet

Front Radius Rod - Offset Bushings

Z6061

N.B: This instruction sheet should be used in conjunction with the workshop manual

Note - it is suggested to note current caster reading before install

1. Raise vehicle evenly and safely support.

Application - Toyota Supra 2019-on
- BMW Z4 2018-on

Never rely on a Jack only



(Always refer current catalogue for complete listings)

2. Un bolt radius arm mounting bolt and ball joint and remove arms.
3. Press/push out worn bushings, careful to safely support and not damage the aluminium arms.

Contents - 2x offset shell bushings

4. Using a suitable press tool, press new bushings in arm.

Refer image below for castor arrangement.

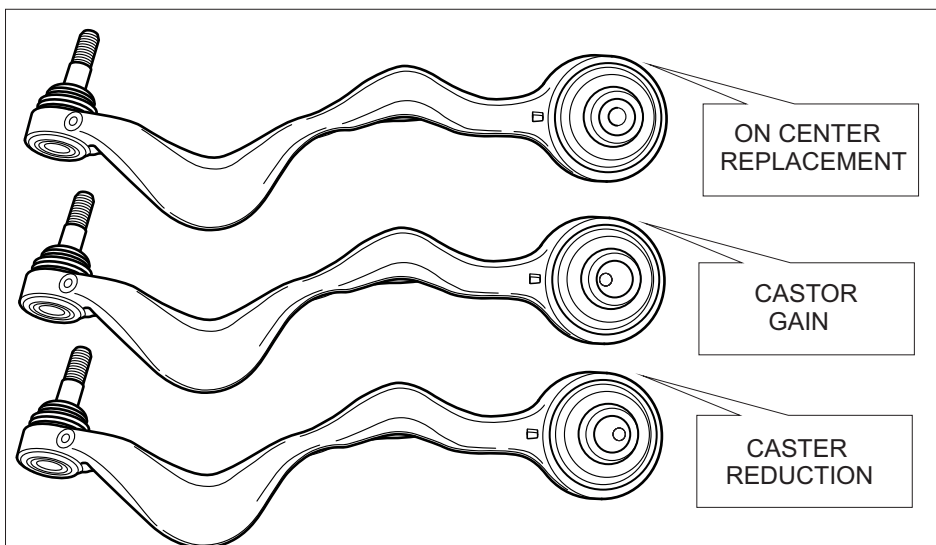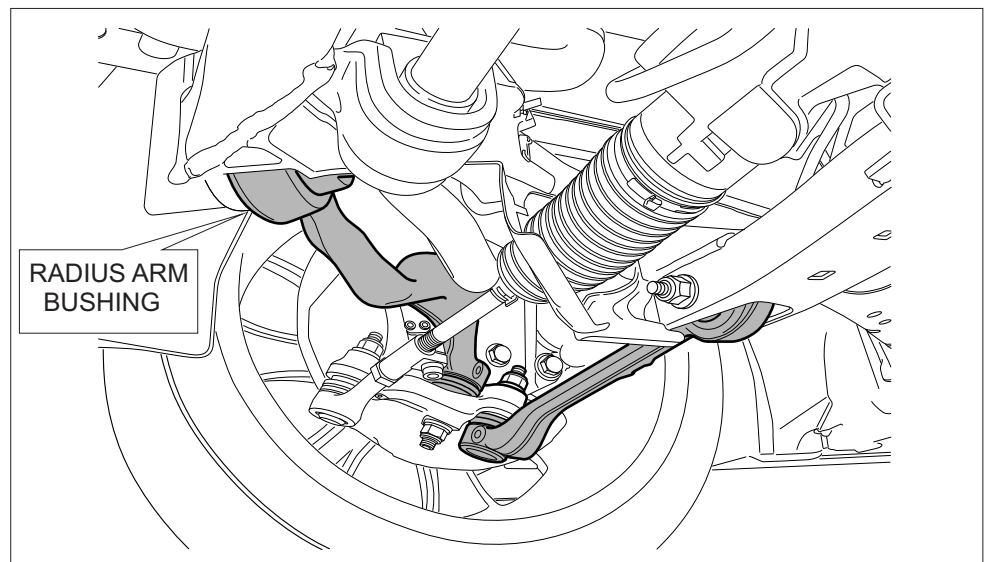

5. Re-assemble arms with original bolt.

A wheel alignment must be carried out immediately after install to correct Toe change.

6. Re check after initial 100kms

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.