

Instruction Sheet

Front Radius Rod Bushing


Suits: VE-VF Commodore

Z5355
Rev. A

N.B: This instruction sheet should be used in conjunction with the workshop manual

1. Raise vehicle and safely support.
2. Remove front wheels.
3. Un-plug ABS plug to avoid damage.
4. Un-bolt and remove Radius arms - proceed to press out old bushings.
5. Confirm eyelet is clean prior to pressing in new unit - note image below regarding voiding.
6. Confirm chassis section is clean. Grease bushing ID and face prior to re-fitting arm.
7. Re-fit arm to vehicle - torque bolts to OE specification.

Voiding Orientation

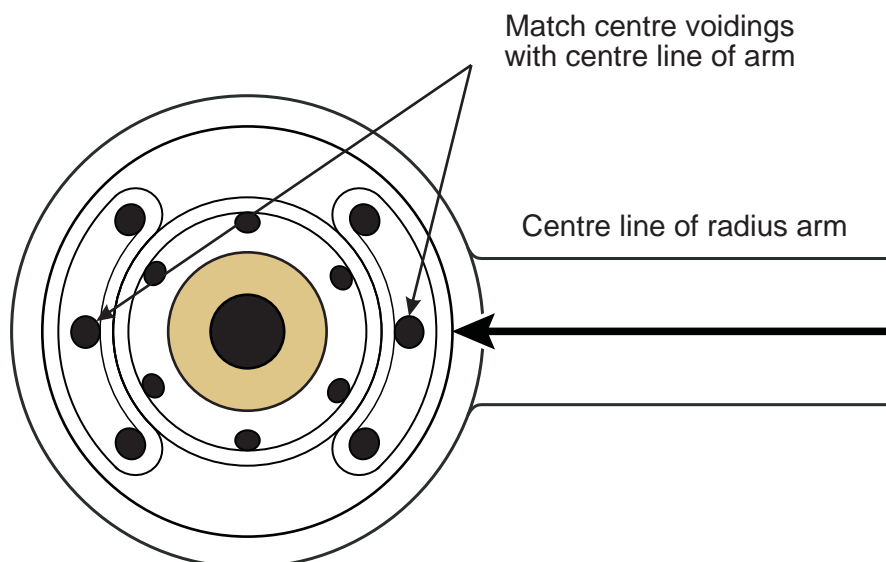

NOTE: It is recommended that a wheel alignment be performed directly after fitment.

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.