

# Instructions

## Front Radius Rod Bushings

**Note** - This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

- Raise vehicle evenly and safely support.

*Never rely on a jack only*

- Proceed to remove front wheels and splash trays  
Also the lower cradle assembly - to access bushing

**Application** - Nissan 350Z Z33  
- Nissan Skyline V35  
- Nissan Stagea M35

*(Always refer current catalogue listings)*

**Contents** - 4x bushings 67409  
- 2x steel tubes 36x20x74  
- 2x steel washer 52x20x3  
- 2x steel washer 60x16x3  
- grease



- Remove radius rods from vehicle.

**Note** - hydraulic press will be required

- Press out old bushings - including steel outer shell.

**Confirm radius arm is clean of any burrs or oil/grease**

- Push in new supplied bushings.

Refer Page 2 -



It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.


# Instructions

## Front Radius Rod Bushings

**Note - This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.**

- Grease bushing internal diameter and faces with supplied grease only.
- Push in supplied steel tubes.

**IMPORTANT - place supplied washers either side of bushing**

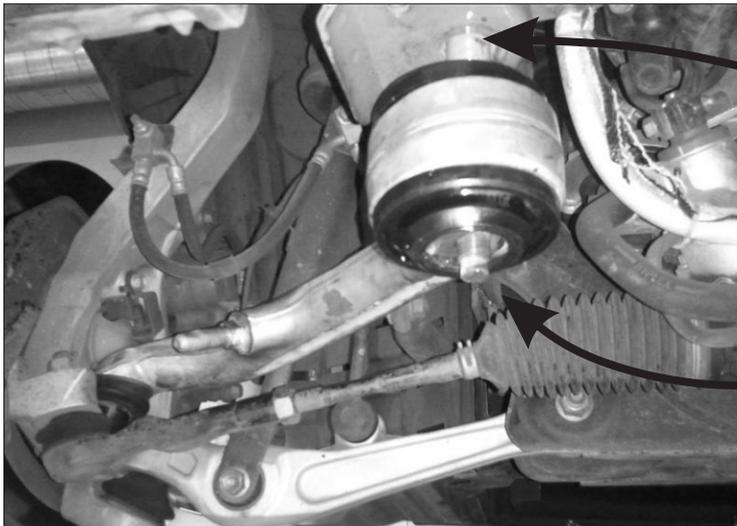

**Place washer 52x20x3 on top side of bushing**

**Place washer 60x16x3 on lower side**

- Finish bolting arm up to vehicle - re-fit the lower cradle to vehicle.
- Re-fit splash trays and road test.

**Note - a wheel alignment will be required after install.**

- Re-check all nuts bolts after 200kms



It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.