

Instructions

Rear Panhard Rod - Connecting Rod Bushings

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Application - Nissan Elgrand
- E50 1995-2002


(Refer current catalogue for complete listing)

- Raise vehicle evenly and safely support.

Never rely on a Jack only

- Proceed to un-bolt connecting rod.
- A hydraulic Press will be required - to press out original bushing, including steel outer shell.
- Refer image below for bushing location.
- Push new supplied bushings in clean Eye's.
- Grease bushing internal diameter and side face with supplied grease only.
- Re-fit Connecting rod to vehicle.
- Tighten bolts to 100Nm
- Re-check bolts after 100k

Contents - Bushing 91759 x2
- Bushing 91760 x2
- Steel tube 28.6x22x39.5 x1
- Steel tube 25.4x14x45 x1
- Steel washer 42x14x2.5 x2
- Grease

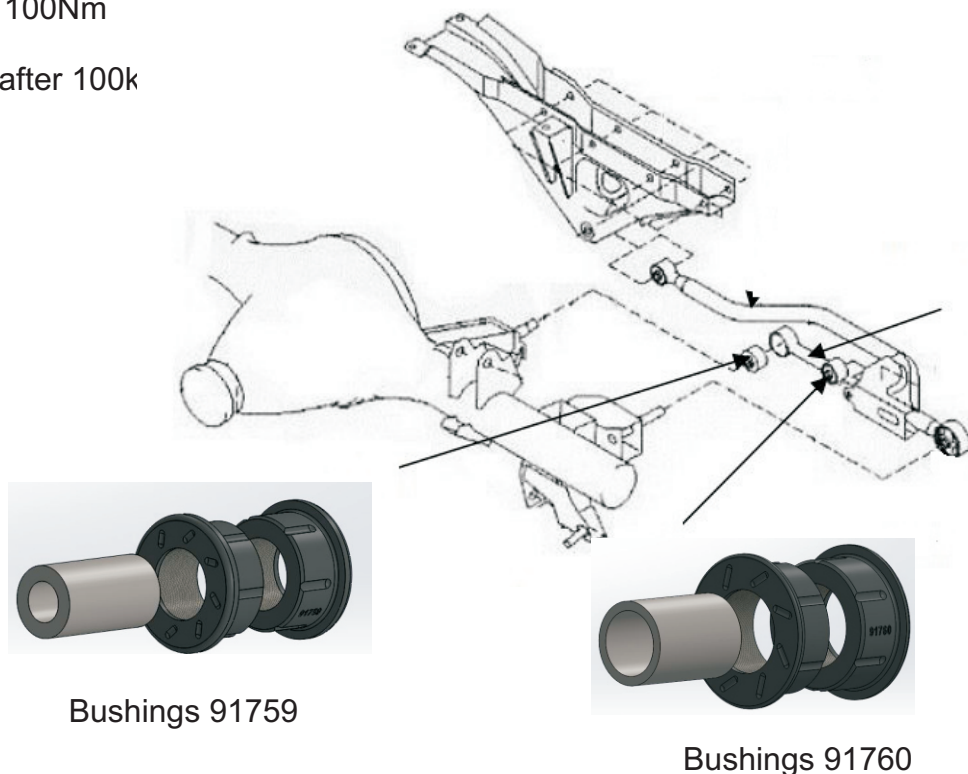

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.