


LOWER CONTROL ARM

1. Support the vehicle. Remove the ball joint & sway bar link rod
2. Remove lower wishbone
3. Press old bushings from the wishbone using suitable spacers and inspect arm thoroughly for signs of bending or cracking. Replace damaged arms
4. Set up arm in a suitable press and fit new bushes taking care to support the arm and use spacers to prevent the blade from distorting or collapsing

NOTE: There are 4 bushes in this kit. Two are branded '1026' and must be fitted to the eyes that face the front when the arm is fitted to the vehicle. (Refer diagram)

5. Lubricate end faces and bores of bushes with grease provided before reinstalling the wishbone
6. Reassemble suspension according to the manufacturers' workshop manual
7. Tighten all components to manufacturers' recommended torque settings

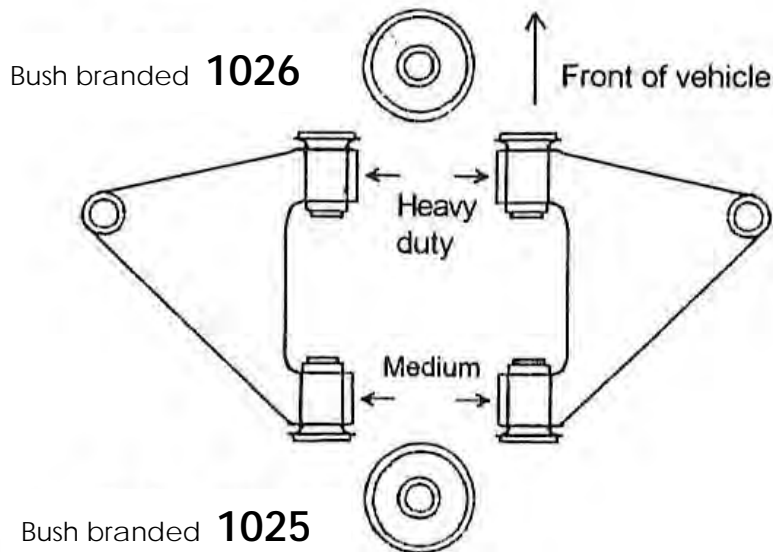

This procedure must be carried out by a qualified person