

Instructions

Front Control arm - Rear bushing

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Single Off-set kits are designed to fix vehicles pulling left or right

1. Check current caster settings prior to install.
2. Raise vehicle evenly and safely support.

For Polo - bushing will need to cut out.
The original bushing has a plastic outer shell - this can be cut out with a hacksaw.

For other vehicles, it is suggested to mark aluminium housings prior to removal - to confirm there original positions.


3. Press supplied bushings into position - note below for offset bushings - for caster increase

Note the large bushing ID is stepped - install bushing with large ID to the front of vehicle.

4. Press small bushing 60316 over control arm. Grease this bushing OD with supplied grease only. Grease large bushing ID also.
5. Re-fit arm to vehicle - tighten bolts to manufacturers spec.
6. Carry out wheel alignment immediately. Re-check bolts after road test.

Application - VW various models
(Refer current catalogue listing)

Contents -1x bushing 91030
- 1x bushing 91031
- 2x bushing 60316
- Grease

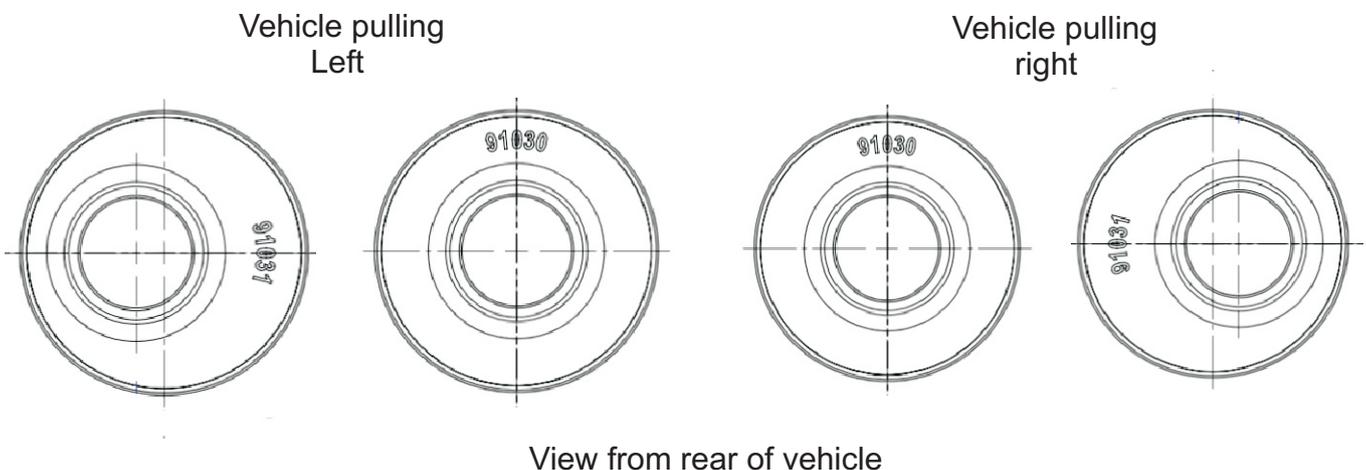

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.