

Fitting Instructions

Rear Swaybar Kit

Code: Z5504

Application:

Toyota Land Cruiser 79 series

Kit : Rear Swaybar.

Always refer to current catalogue for complete application listing.

Kit Contents:

- | | |
|------------------------------------|----------------------|
| 1. 1 x 27mm Swaybar | 4. 2 x lateral locks |
| 2. 2 x mounting brackets | 5. 2 x ball links |
| 3. 4 x M8 bolts. | 6. 2 x D bushes |
| 7. 4 x washers and spring washers. | |

INSTRUCTIONS

1. Reverse vehicle up onto ramps on a flat safe surface.

2. Mount link bracket to the front leaf spring eye using existing hardware as per figure 1.

3. Bolt ball link to mounting bracket as per figure 1 and tighten.

4. Loosely bolt the lower ball link to the Swaybar eyelet.

5. Using the existing mounting platforms, mount the supplied saddle with D bush utilizing the supplied M8 bolts and washers

6. Once installed, make sure the Swaybar is central and there is sufficient clearance from the diff housing, refer figure 3.

7. You may need to adjust ball link length to eliminate any static load. Once this is checked, tighten the ball link and chrome lock nut.

8. Lastly, mount the supplied gold lateral locks to the swaybar as per fig 2.

9. We recommend re checking all hardware after 100kms

Fig 1.

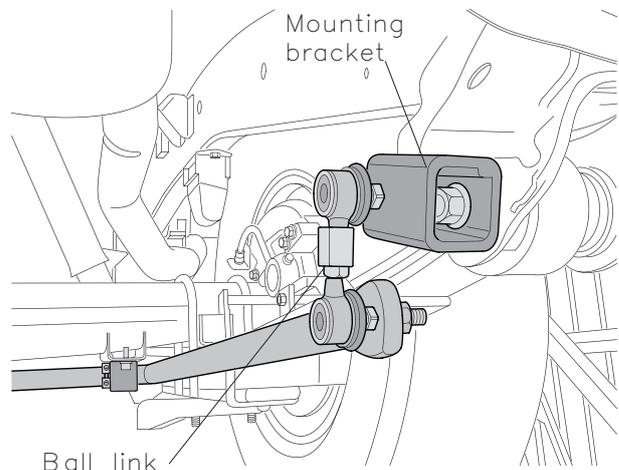


Fig 2.


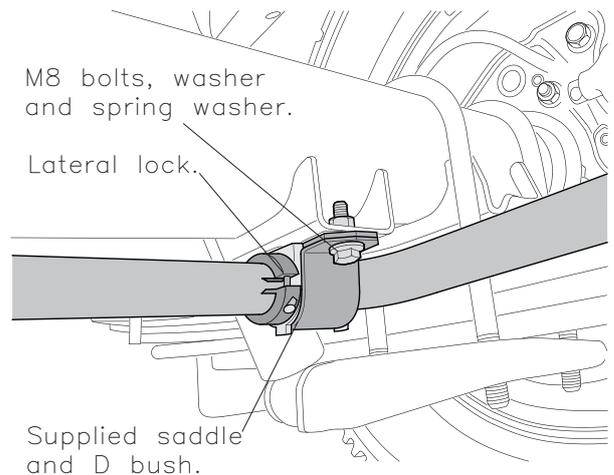


Fig 3.

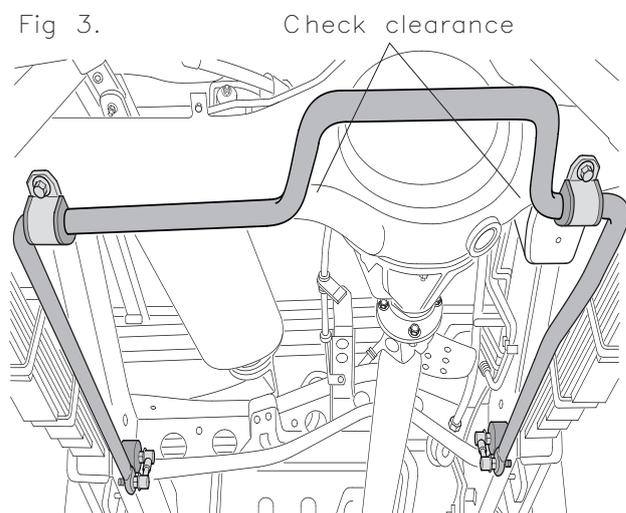

Warning: Please drive carefully while you accustom yourself to the changed vehicle behaviour.