

Fitting Instructions #3850IS

NISSAN GT-R R35 - 2009-on

Control Arm Upper-Inner Eccentric Kit (Front)



Note: Polyurethane bushes must be fitted to both sides of the vehicle.

- Jack the vehicle up and support on stands/hoist.
- Remove original bushes including the steel shell from the upper control arms with the use of a hydraulic press and suitable pressing tools.
- Clean housing areas to remove any old original bushing materials before installing new bushes. Apply the grease supplied to the housing and the outside of the bush, and then push the new bushes in **with reference to the diagram below.**
- **Note:** Set the hex side of the crush tubes so they sit on the outer locations of the arm (to get more clearance for camber adjustment later on). Using the grease supplied, generously lubricate the outside of the steel crush tube, the bore of the new bush and then, push the crush tubes in.
- With reference to Table 1, and the settings required, adjust the new crush tubes with the spanner provided, so that the hole is positioned to give the desired camber result.
- Tighten all bolts ensuring that you use manufacturers torque settings, wheel align vehicle and check new settings.

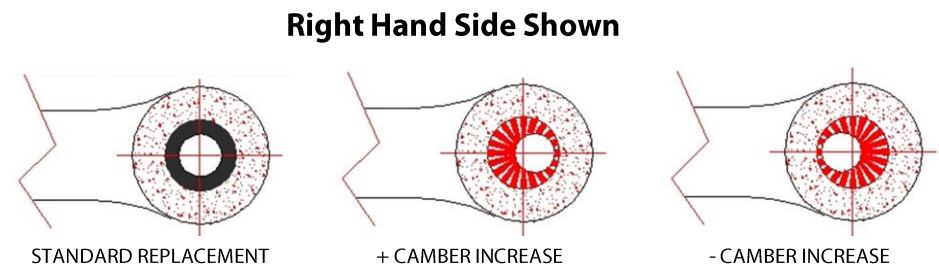
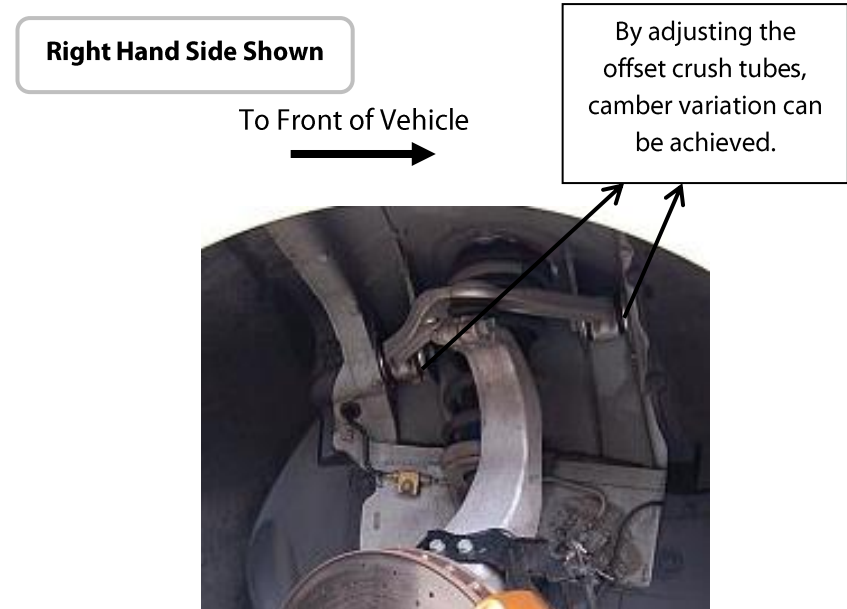
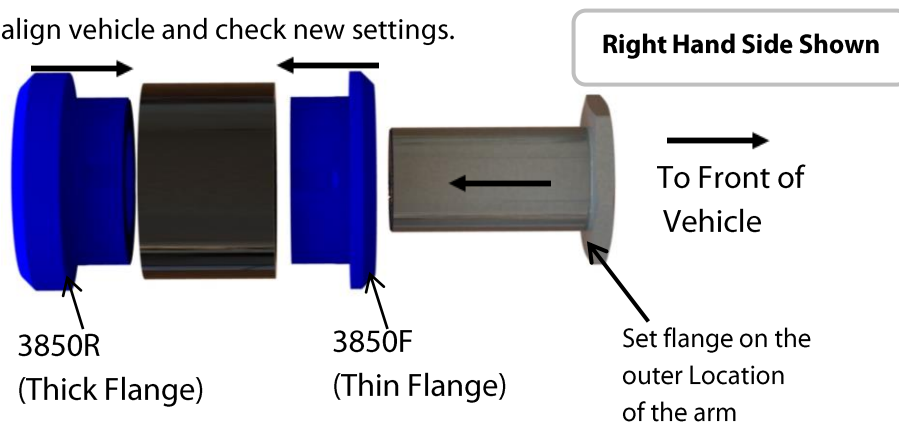


Table 1: Illustration of Camber settings