

Fitting Instructions #5144IS

LDV T6o

ABS and Headlight Bracket Realignment kit

Note: This kit is to suit a nominal 50mm or 2" lifted vehicle

1. With the vehicle safely supported identify the ABS cable bracket which located is on the inside of the right hand chassis rail.
2. Carefully prise the ABS cables from the original bracket to help when relocating the bracket.
3. Remove the retaining bolt release the bracket and reusing the original bolt attach the new bracket to the chassis as per image below.
4. Using the new bolt included in the kit attach the original bracket to the new bracket ensuring the locating tab fits in the location slot



New bracket installed




Re fixed bracket and ABS cables re attached

- 6 Noting the orientation remove original headlight sensor to differential mount bracket and set aside.
- 7 Fit new bracket using the original fasteners and re attach sensor arm as per photo below.



Remove original bracket

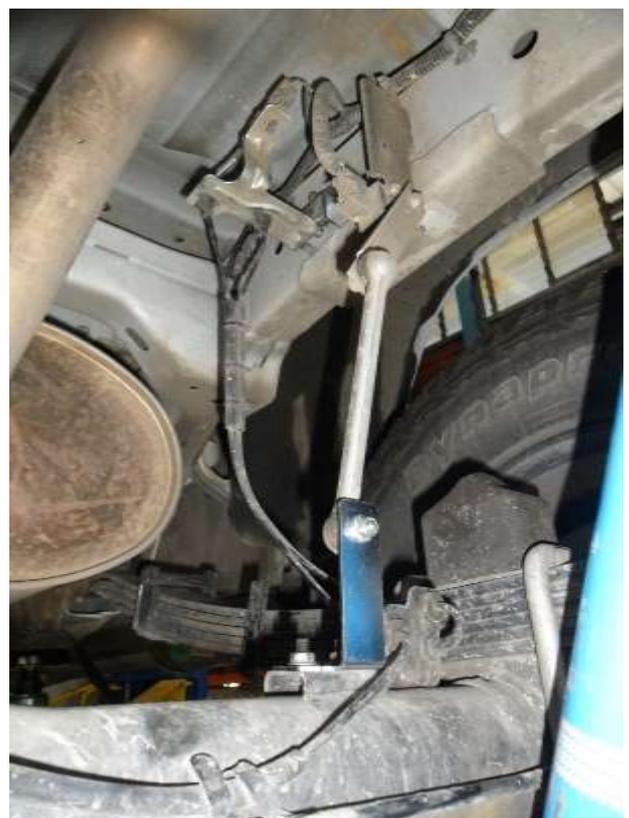

Completed assembly with new brackets installed