

Fitting Instructions #TRC1171IS

Ford Falcon XE, XF

Front Control Arm Lower Assembly Kit




Note: These instructions should be used in conjunction with workshop manual.

1. Raise vehicle on chassis stands and remove the front wheels from the vehicle.
2. Support the vehicle and disconnect the ball joint, radius rod and sway bar link.
3. Remove the front lower control arm from the vehicle.
4. Remove the old bush and shell from the arm and inspect the control arm for damage or cracking.

Note: Press fit in the new bush taking care to support the arm around each eye to minimise damage to the arm.

Note: Ford Falcon arms suffer from stretching of the eyelets especially if a spacer is not used at installation.

5. Lubricate end faces on the bushes with grease provided, before assembly.
6. Refit end washers and tighten locknuts after installation.
7. Re-assemble the suspension as recommended in the workshop manual.
8. Tighten all components to manufacturers recommended torque settings.
9. We recommend that a wheel alignment be carried out after carrying out the above procedure.

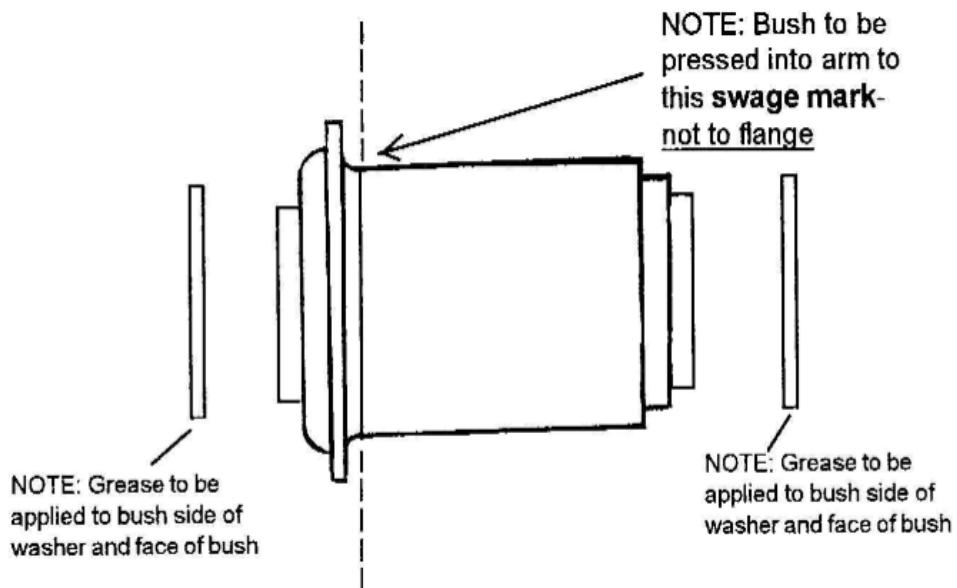

Note: It is recommended that the above procedure is carried out by a licenced workshop or tradesperson.