

Fitting Instructions #5425IS

Mitsubishi Pajero Sport 2015-on – QE, QF

Rear Coil Spring Upper Insulator


Note: Polyurethane bushes must be fitted to both sides of the vehicle. This kit should be installed by a Qualified Motor Mechanic.

- Jack the vehicle up and support on hoist/stands;
- Support the rear diff with a long adjustable stand evenly on both sides (outermost LH and RH).
- Remove the lower shock absorber bolts and disconnect the Swaybar links. Then, lower the diff to remove the coil springs. **Note:** Ensure not to strain any ABS wiring or brake lines;
- Thoroughly clean all contact areas with a wire brush.
- The new polyurethane insulators fit in the same way as the original insulators;
- Position the rear upper insulators (5425) on the top side of the coil spring. Ensure to apply the grease supplied on all contact areas;

Note: All sharp edges on the coil spring must be removed to avoid cutting through the insulator material during usage.

- Refit the rear coil spring onto the vehicle. You may use a spring compressor to aid installation.
- Reassemble the rear end of the vehicle in reverse order of disassembly.
- Manufacture's torque setting must be used on all bolts, wheel align the vehicle and check new settings.
- Recheck all bolts after 1000km or 1 month;

Upper Spring
Insulator (5425)

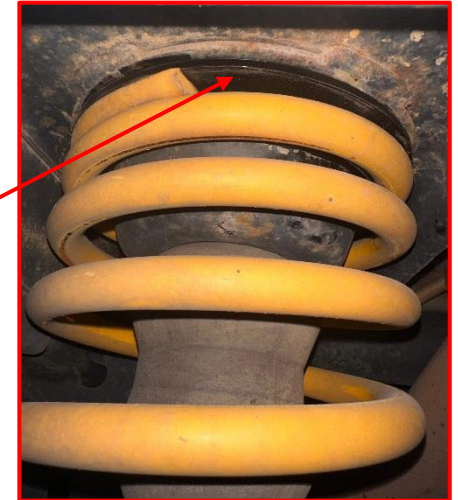

Shock Absorber
Lower Bolt



As viewed from the front of the vehicle