

# Fitting Instructions #4110IS

TOYOTA 86 GT / FT, SUBARU BRZ

## Rear Differential Pinion Mount Bush

- Jack vehicle up and put on stands/hoist, then remove the rear differential assembly.
- Support the rear differential and proceed to remove factory bushes.
- The factory bush is a shell part. To remove, an air chisel would be an ideal tool. Note: care must be taken to not damage the housing.
- Clean housing areas to remove any old original bushing materials.

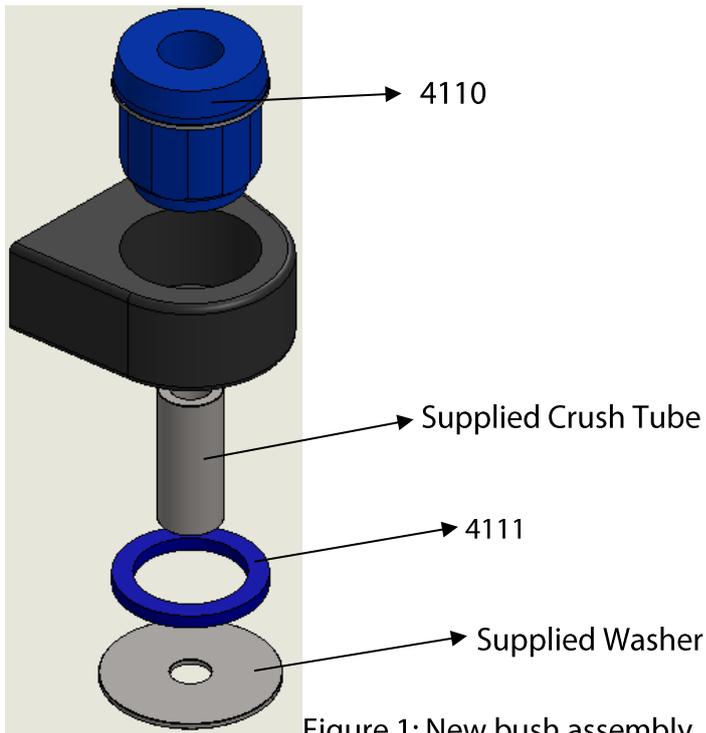


Figure 1: New bush assembly

- With reference to the figure above, lubricate and install bush part number 4110 into the upper position and then, install bush part number 4111 onto the step of 4110 bush at the lower position.
- Lubricate the bore of the bushes and push the crush tube into the bushes.
- Place the supplied flat washer onto the lower position and re-use the factory bolt to tighten.
- Refit the rear differential back to the vehicle ensuring that you use manufacturer's torque settings on all fasteners and carry out a wheel alignment.