

Fitting Instructions #TRC9001-HCIS


Suzuki Jimny AG6 2018-On 3 Door and 5 Door

Front High Clearance Cross Member




NOTE: These components must be fitted by qualified persons only, to factory specifications, as per the factory service manual. Photos are an indication and may vary slightly in appearance from the actual product

1. Raise vehicle so that you can access the front cross-member. Support the vehicle with stands if it has been lifted off the ground.
2. Remove the 4x M10 bolts holding the OEM cross member to the chassis and remove the OEM cross member.

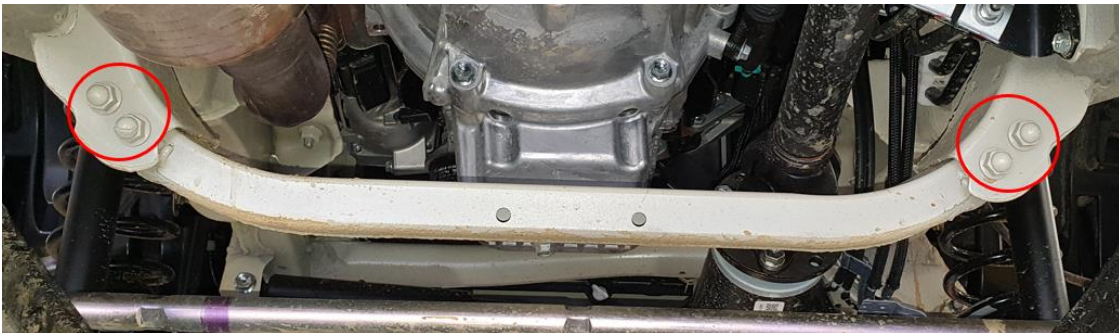

3. Install the new cross member with the longer crush tube section facing forward, as shown below.

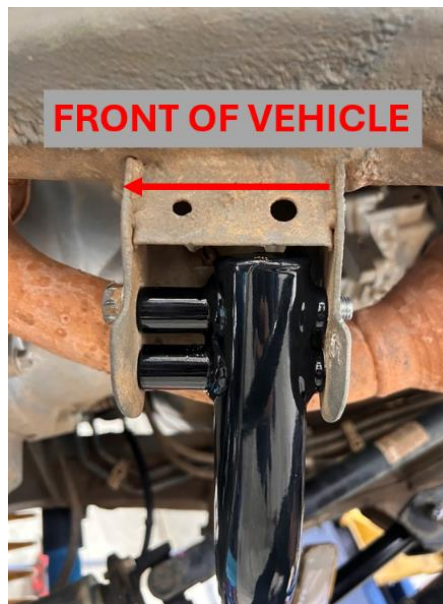

4. Re-install the OEM bolts and nuts and tighten them to OE specifications.