

# Fitting Instructions #3845IS

## Hyundai Terracan

### Front Control Arm Lower Front Bushing

**Note:** Polyurethane bushings must be fitted to both sides of the vehicle.

- Wheel-align the vehicle before the job is started and note settings;
- Jack the vehicle up and support on jack stands/hoist;
- Remove the radius control arms of the front suspension;
- Remove original front bush with the use of a hydraulic press and suitable pressing tools;
- Press the new '3845' bush into the control arm front housing, Figure 01 and Figure 02;

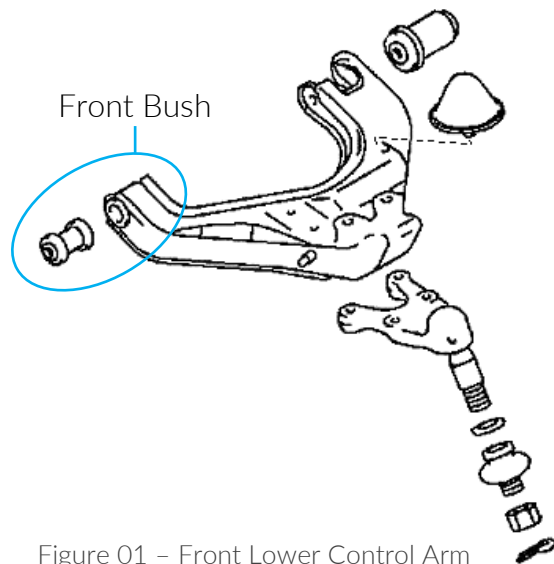


Figure 01 - Front Lower Control Arm

- Apply the white grease supplied to outside surface of the crush tube and into the bore of the bush;
- Push the new polyurethane bush into the housing, see Figure 02;
- Refit the control arm to the vehicle and tighten all bolts to manufacture's torque settings;
- Carry out wheel alignment.

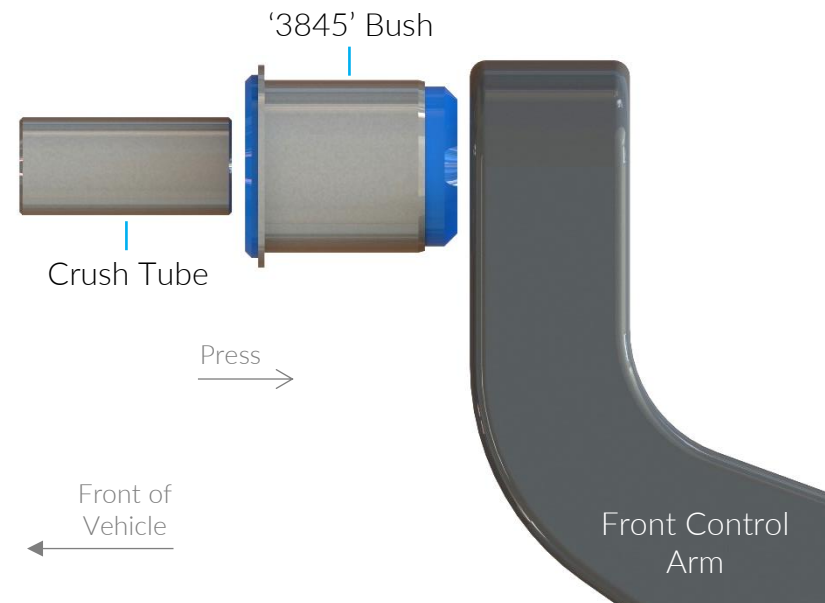


Figure 02 - Front Lower Control Arm Front Bushing installation