


# Fitting Instructions #TRC543IS

Nissan Navara D22 1997-2014

## Front Lower Control Arm



- Raise vehicle evenly and safely support with a hoist or stands. Never rely on a Jack only.
- Proceed to remove front wheels, then following manufacturer's recommendations remove the front lower control arms from the vehicle.
- **Note - remove the Bump Stop from the original arm and install it on the new control arm** (Refer image below).

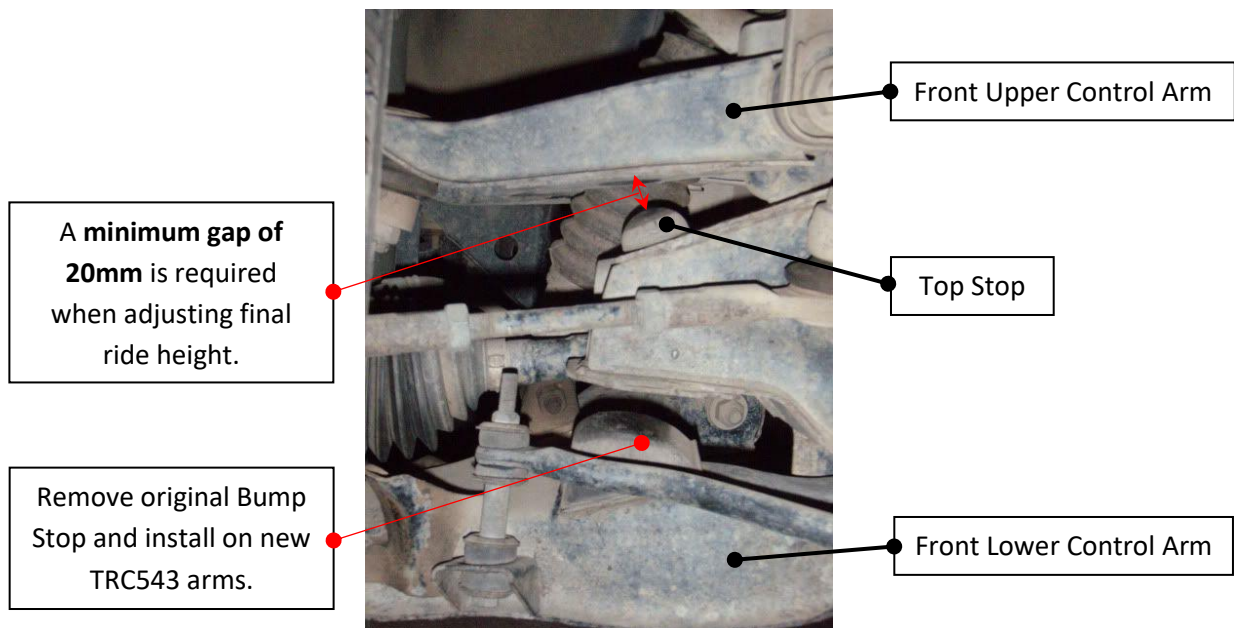

- Adjust the torsion bar the desired height. **Important:** ensure that you leave a **minimum of 20mm gap** between the Top Stop and the upper control arm (Refer image above).
- Bolts are not supplied with this kit, OE bolts may be reused provided the bolt never exceeded its yield point.
- Tighten all bolts to manufacture's torque settings and carry out a wheel alignment.
- Re-check all bolts after 1000kms