



Fitting Instructions #TRC1050IS

Mazda 3 03-09

Front Lower Control Arm



- Raise vehicle evenly and safely support with a hoist or stands. Never rely on a Jack only.
- Proceed to remove front wheels, then remove the ball joint nut and bolt.
- Next, loosen and remove the 2 rear vertical bolts, followed by the front horizontal bolt. The original arm can now be removed from the vehicle.
- **Note - the new supplied rear brackets are asymmetrical - and can be installed on either LH or RH arm** (Refer images below).

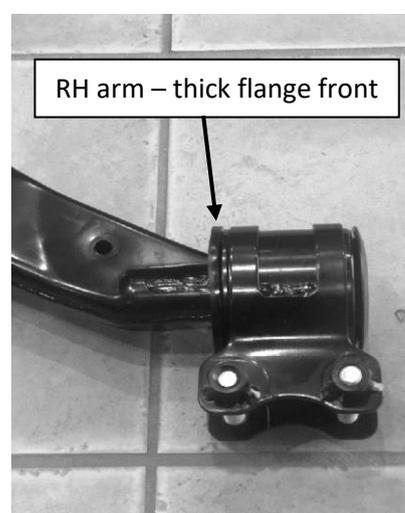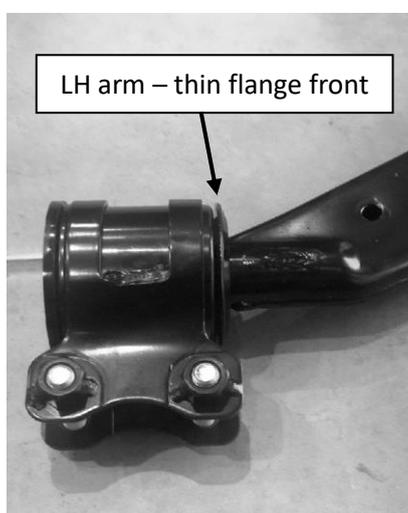

- Note the nuts are 'upwards'. Refer image above for correct install of rear bracket.
- Install the new control arm back into the vehicle, using the supplied bolts for the rear bracket and reusing the OEM bolt for the front position.
- Tighten all bolts to manufacture's torque settings and carry out a wheel alignment.
- Re-check all bolts after 500kms