

1721X IS B


TOYOTA LANDCRUISER 80 & 100 SERIES

*SPECIAL KIT FITTED WITH OFFSET CRUSH-TUBES FOR EXTRA CASTER!

Fitment for drivers side and passenger side trailing arms to increase caster. Tube fitment is identical for both arms.

Lay the trailing arm on this template and mark the bushes as indicated.

Press in the bushes with the hole closest to the mark. Distance between hole centers must be $185 \pm 0.5\text{mm}$ for easy fitting.

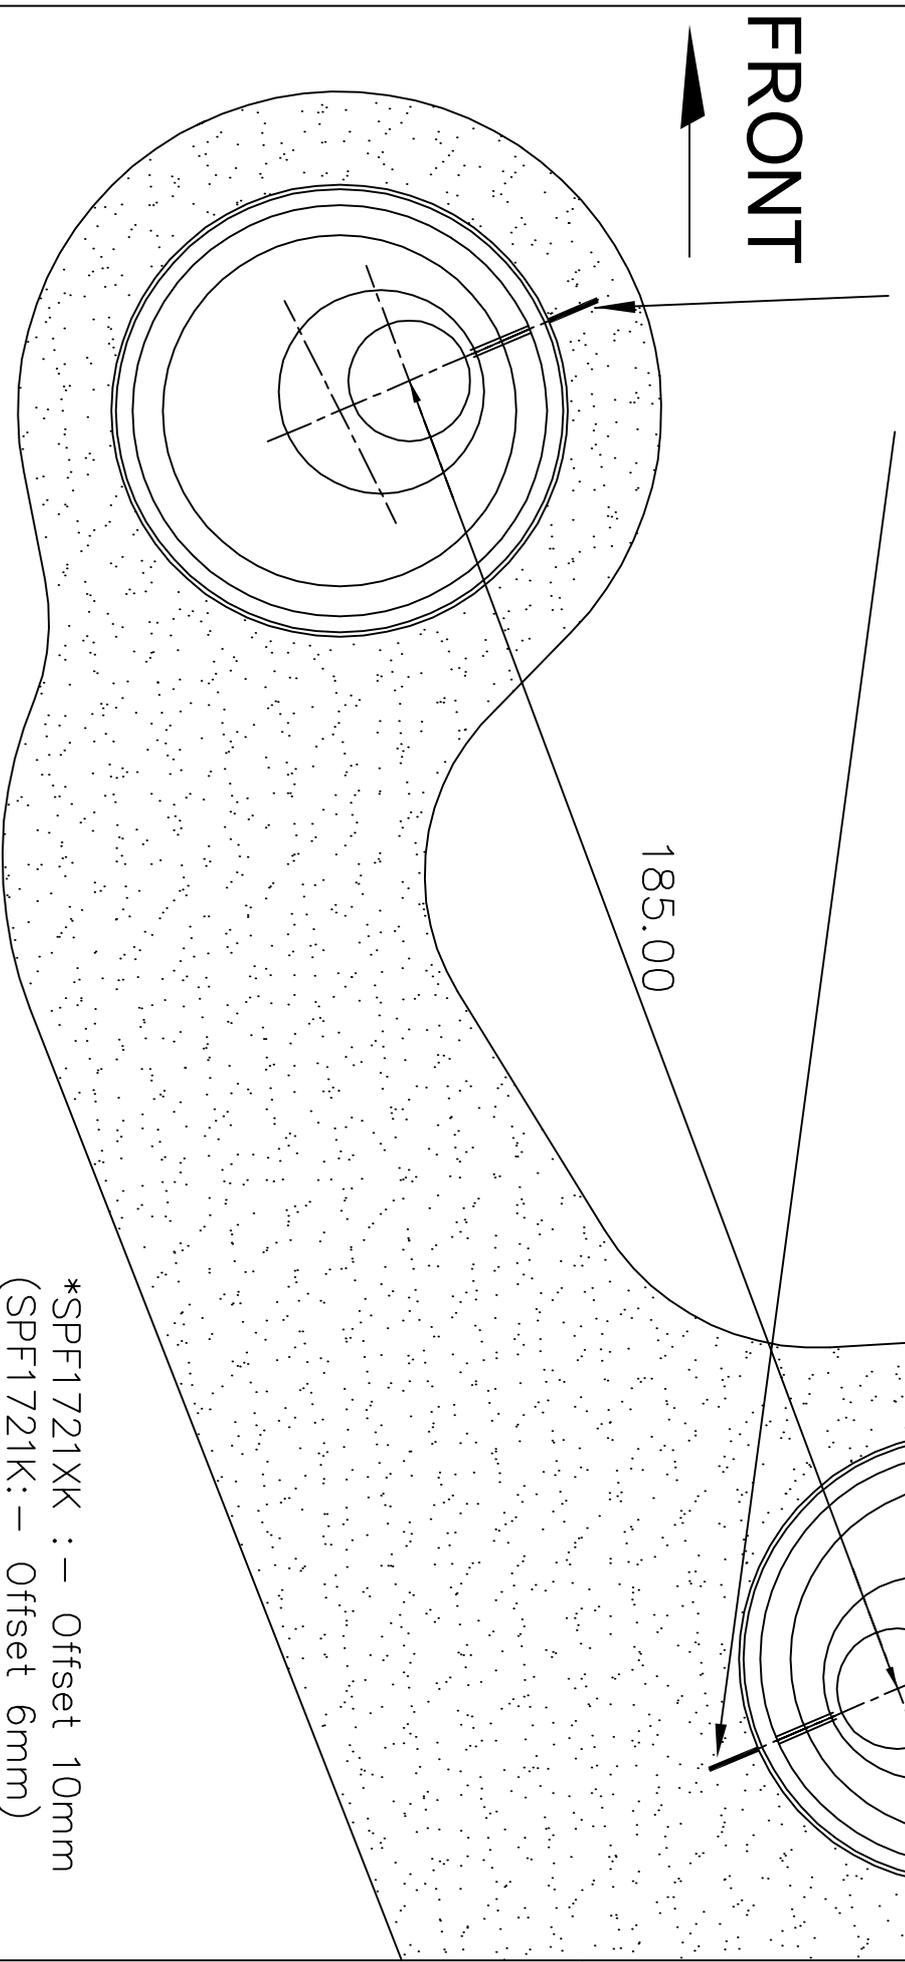

*SPF1721XK :- Offset 10mm
(SPF1721K:- Offset 6mm)