


Fitting Instructions #3579IS

Nissan Maxima A33

Control Arm Lower Front and Rear Bushing

Superpro
Suspension Parts

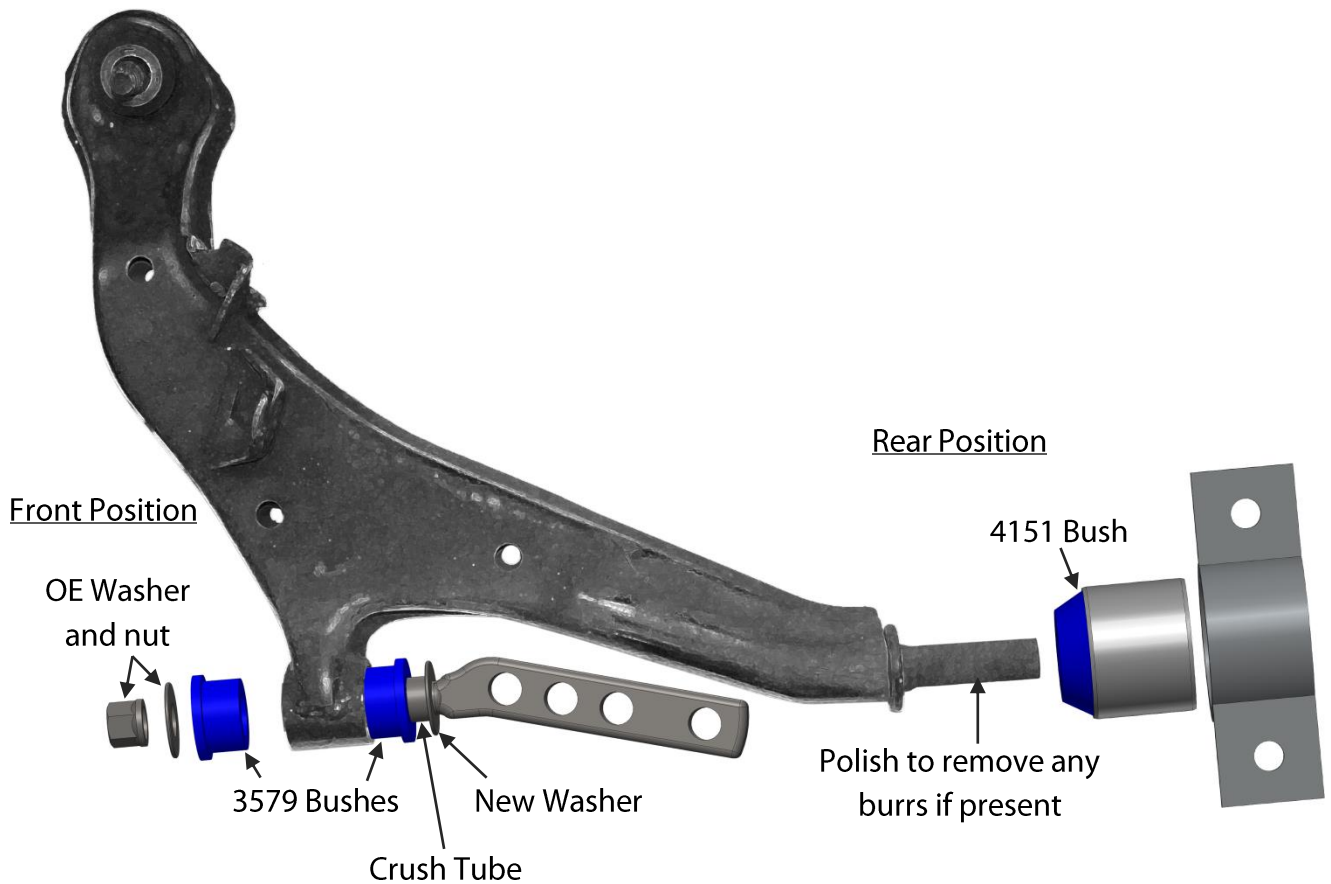

- Jack the vehicle up and support on jack stands;
- Following manufacturer's recommendations, remove the lower control arms from the vehicle;
- Remove original shell parts from the housing with the use of a hydraulic press and suitable pressing tools;
- Carefully polish the peg on the end of the arm to remove any burrs if present;
- With reference to the diagram, note the position of the new bushes in the arm as described:
 - Front position: install the '3579' shackle bushes and the tube. Please remember to lubricate the housing, the inside and outside surfaces of the bushes and the outside of the tube. Push the new polyurethane bushing into the housing and then the crush tube into the installed bushes. **Note** that the new washer supplied has to be placed as shown in the picture.
 - Rear Position: install the '4151' shell bush in the bracket, lubricate the bush bore and then fit the arm into the bush as it is shown in the picture.

Note: A hand press may be required to insert the steel tube, as there can be significant crush.

- Refit the control arm to the vehicle and tighten all bolts to manufactures torque settings;

Note: Polyurethane bushes must be fitted to both sides of the vehicle.

- Carry out wheel alignment.