

Fitting Instructions – Z7045


Dodge Ram 1500

Rear Panhard Bushing

KIT CONTENTS		
PART No.	DESCRIPTION	QTY
SPF2832	Rear Panhard Bush	2
F8072A	22.2x14.3x40.58 TUBE	2

Note, this instruction sheet should be used in conjunction with a workshop manual and proper safety procedures followed.

- Place the vehicle securely on a hoist or jack stands
- Support the rear diff with a jack stand or hydraulic jack
- Attach a ratchet strap between the differential and the chassis, as seen below. This will limit movement of the differential and make install easier.

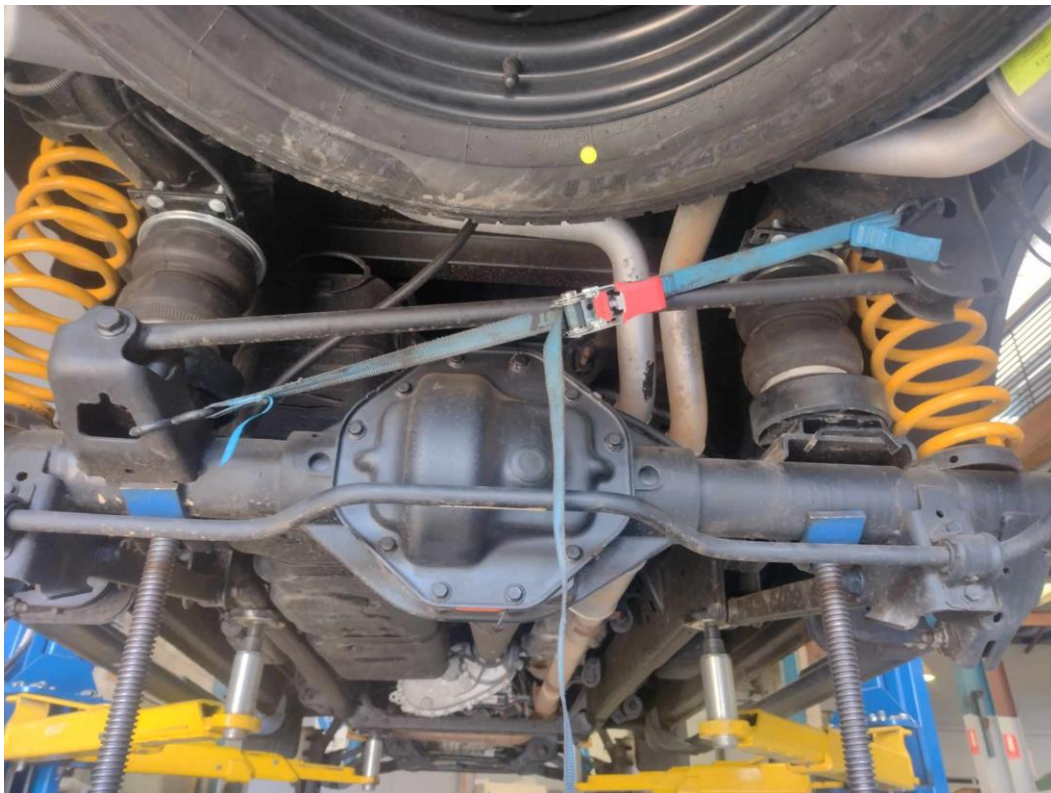

- Remove Panhard rod from vehicle
- Press the old bushes out. This can be done either by cutting the head of the bush off and pressing out the remains or by using a bearing plate separator to get under the head of the bush and then press it out.
- Press the new bushes into the arm in the same orientation that the old ones were removed. Ensure that the bushes are pressed until the flange of the shell contacts the face of the arm.
- Apply grease to the bore and outer faces of the bushing
- Press the crush tube into the bush
- Reinstall the Panhard into the vehicle and remove ratchet strap
- Torque bolts to manufacturers specifications
- Wheel alignment after install is recommended