

Fitting Instructions #1600V8KITIS

Ford Falcon

Camber Caster Adjusting Kit

Superpro
Suspension Parts


#1600V8K & #1600SLV8K



Taking either SPF1600K or SPF1600SLK as required, remove the captive bolts, taking care not to damage the threads. Do not discard the bolts.



Using SPF1600P and the captive bolts already removed from the brackets, assemble in SPF1600P-JIG and press the bolts into SPF1600P, taking care not to damage the threads.

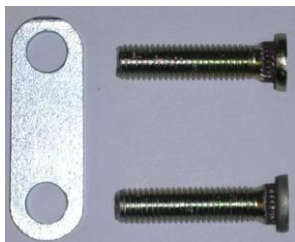

Include 2xSPF1600P assemblies and 2xSPF1600W in SPF1600V8K and SPF1600SLV8K



Check kits for contents:

- | | |
|-----------------------|--------------------------|
| 3 x 6mm Thick Shims | 2 x Replacement Brackets |
| 2 x 3mm Thick Shims | 2 x Bolt Plates |
| 4 x 1.6mm Thick Shims | 4 x Hex Lock Nuts |
| 2 x Washers | |

