

Fitting Instructions #3260IS

Mazda MX5 NC

Rear Trailing Arm Upper Inner Bush Kit



Note: Polyurethane bushings must be fitted to both sides of the vehicle.

- Wheel-align the vehicle before the job is started and note settings.
- With the vehicle on jack stands/hoist, remove rear wheels and the trailing arms you are replacing; **Note:** Use Figure 2 to help identify the correct arm.
- With the use of a hydraulic press and suitable pressing tool, remove the factory bushes including the steel shell.
- Clean housing areas to remove any old original bushing materials.
- Use appropriate pressing tools to support the trailing arm and press the new bushes in. **Note:** install the bush (refer figure 1 below).
- Apply the grease supplied to the bore of the bush and the outside of the steel crush tubes, then press the crush tube into the bush.
- Refit the rear trailing arms to the vehicle and tighten the bolts.
- Ensure that all fasteners are torque to manufacturer's specification and carry out a wheel alignment.



Figure 1: Bush positioning in housing

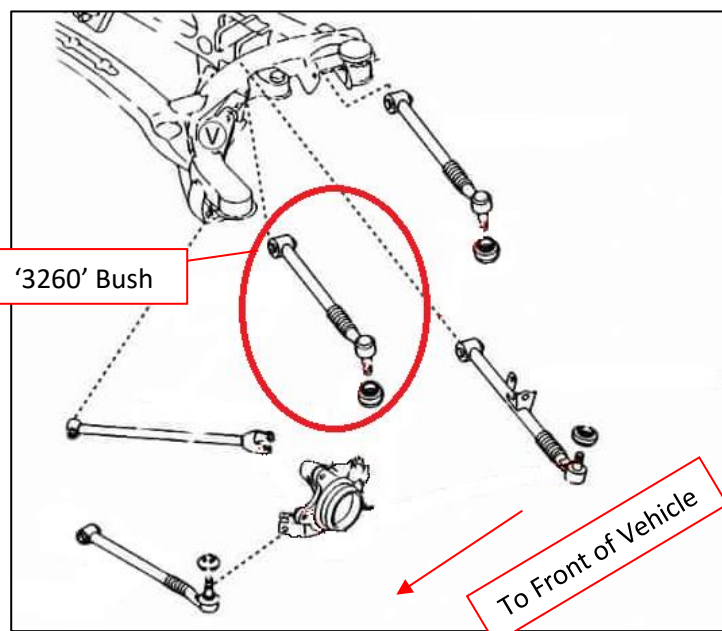


Figure 2: Rear Suspension Arrangement

KIT CONTENT			
KIT No.	PART No.	DESCRIPTION	QTY.
SPF3260K	SPF3260	BUSHES	2
	SPF2454T	CRUSH TUBE (24 X 12.3 X 48)	2