



Fitting Instructions #4191IS

Nissan Pulsar N16 (07/2000-11/2005)

Panhard Rod Bushing (Rear)

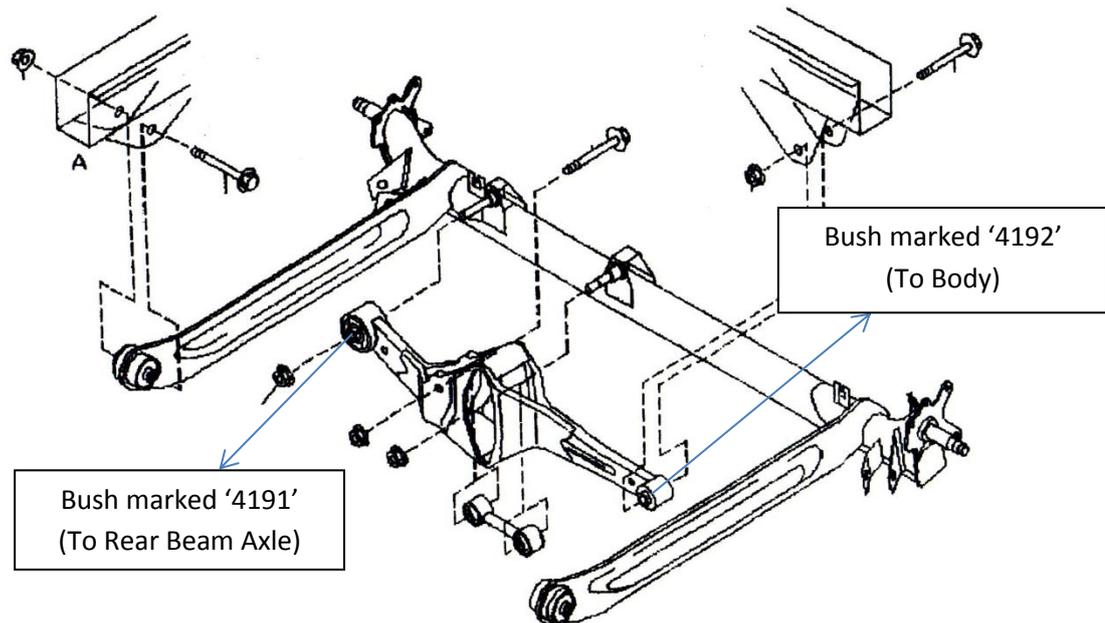

- Jack the vehicle and place on floor stands or raise on a two-post hoist.
- Remove the rear panhard rod from the vehicle
- Remove original bushings of the rear panhard rod with the use of a hydraulic press and suitable pressing tools;
- Alternatively, you may remove the original bush by burning the rubber bushing and cutting the shell out. Care must be taken to not damage the housing while performing the cut.
- Clean housing areas to remove any old original bushing materials before installing new bushes;
- Lubricate the body of the new polyurethane bushes and press into the rear panhard rod with reference to the diagram above for position;
- Next, generously lubricate the outside of the steel crush tube, the bore of the new bush and then, push the crush tube in. Note: 24mm OD crush tube goes with '4191' bush, and 22.2mm OD crush tube goes with '4192' bush.
- The loose steel washers in the kit would need to go on both sides of '4191' bush (see figure below)

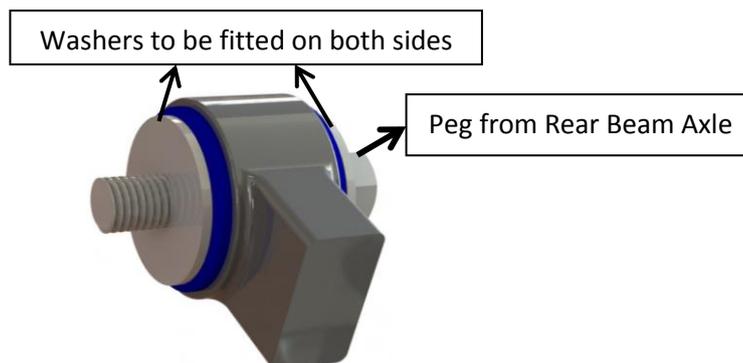

- Refit the rear panhard rod to the vehicle and ensure that all fasteners are torque to manufacturer's specification and carry out a wheel alignment.