


Fitting Instructions #3798IS

Ford Ranger PX 1/2/3

Front Differential Mount Bush Kit – Left Side Lower



- With the vehicle on jack stands/hoist, support the front diff with an adjustable stand or similar, then remove bolts & side brackets to access the differential left side lower mount bushing;
- Remove the original bush in place with the use of a reciprocating saw to cut the inner rubber and remove the inner tube, then cut the outer shell and use an air chisel to force it out of the housing;
- Clean housing surface to remove any old original bushing materials;
- Apply the grease supplied to the housing bore, outside and inside surfaces of the bushes and the outside of the steel crush tubes;
- Install the new bushes according to the image beside;
- Ensure that all fasteners are torque according to the 'General Torque Specification' table below or the manufacturer's settings

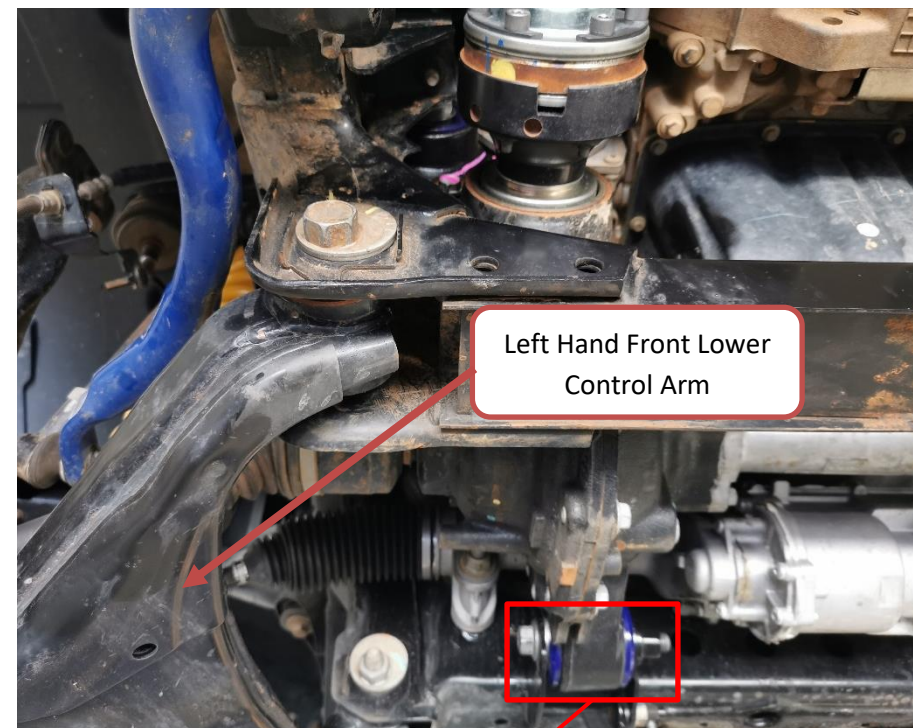

General Torque Specification								
Size	Class 8.8				Class 10.9			
	Lubricated		Dry		Lubricated		Dry	
	Nm	lb-ft	Nm	lb-ft	Nm	lb-ft	Nm	lb-ft
M10	43	32	55	40	63	47	80	60
M12	75	55	95	70	110	80	140	105
M14	120	88	150	110	175	130	225	165

