

Fitting Instructions #TRC1051IS


Mazda 3 09-14

Front Lower Control Arm



Before installing the arms to the car the orientation of the brackets for both arms must be noted to ensure that they are both installed correctly.

For the left arm which is denoted by an 'L' stamp the orientation of the bracket should be as shown below with the thicker flange of the bush being pushed onto the arm first.

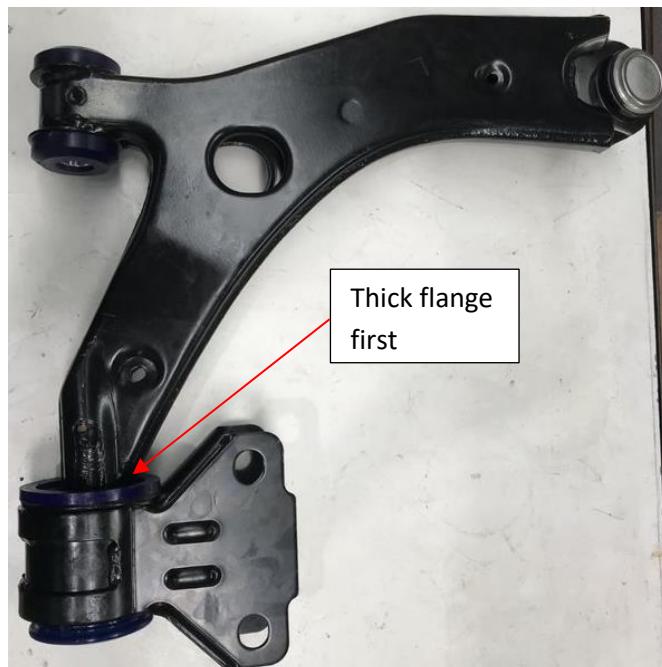

For the right arm the bracket should be in the opposite orientation as shown with the thinner part of the bush being pushed onto the arm first.

