


Fitting Instructions #2100FIS

Hyundai / Kia

Control Arm Lower Inner Front Kit

Left Hand Side Shown

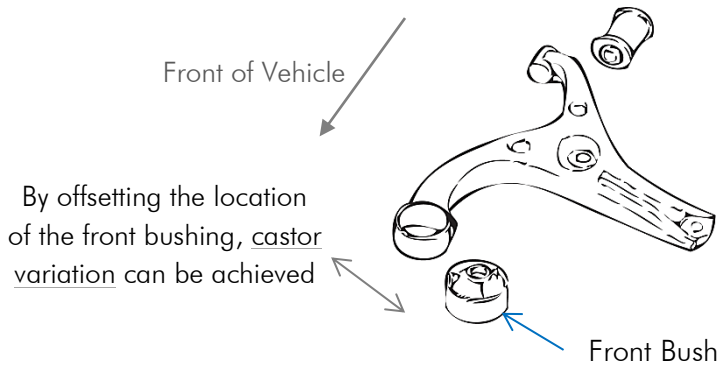


Note: Polyurethane bushings must be fitted to both sides of the vehicle.

- Wheel-align the vehicle before the job is started and note settings;
- Jack the vehicle up and support on jack stands;
- Remove the lower control arms;
- Remove original shell part from the housing with the use of a hydraulic press and suitable pressing tools, see Figure 01;
- With reference to the Figure 02 and Table 01, align the bushing with the bracket so that the hole in the bushing is positioned to give the desired result;
- Press the new '2100' and/or '2102' bushes into the control arm front bush housing, Figure 02;

Suggestion: to install the new bushes, utilise the same tools that were used to remove the original bushes.


- Apply the white grease supplied to the bore of the bush, the outside of the crush tube and the inside of the polyurethane spacers;
- Push in the crush tube and fit the polyurethane spacers;
- Refit the control arm to the vehicle. Tighten all bolts to manufacture's torque settings;
- Carry out a wheel alignment.

Use the press tool number 08 to remove the original bush from the control arm front housing.

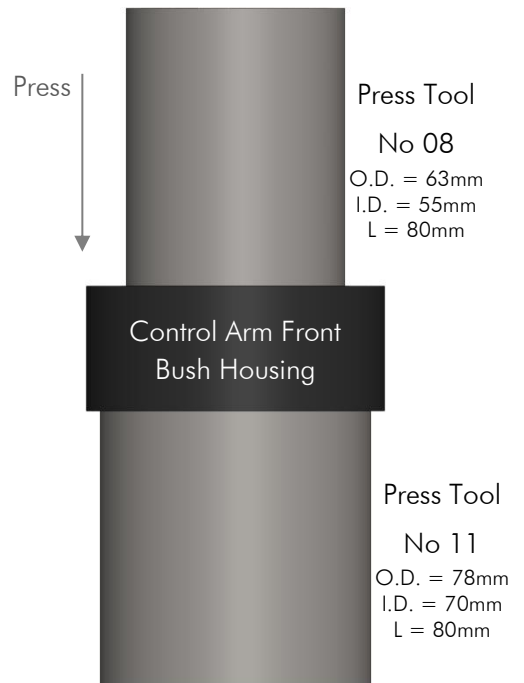

Use the press tool number 11 to support the control arm front housing.

Figure 01 – Original bush removal process

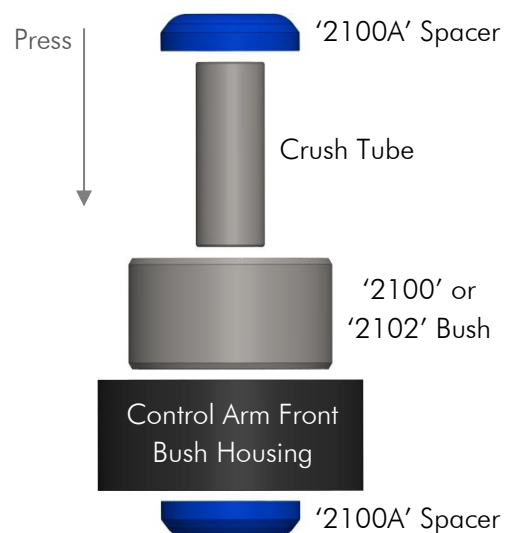


Note: the orientation of the Spacer

Figure 02 – Bush installation


Table 01 – Castor settings

As viewed from the top of the control arm.


Kit #2100K – Standard Replacement
No castor change

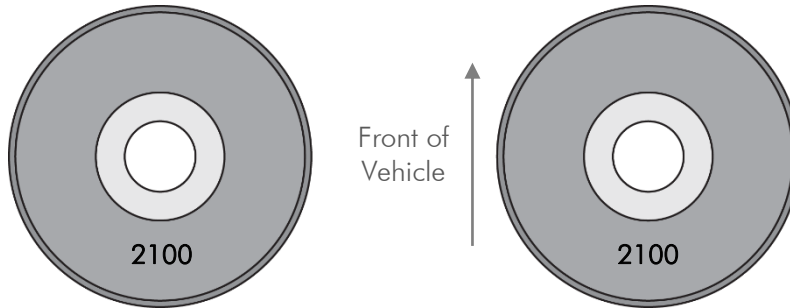

Kit #2101K – To counteract a slight pull to the left
Single Offset, Passenger's side castor increase

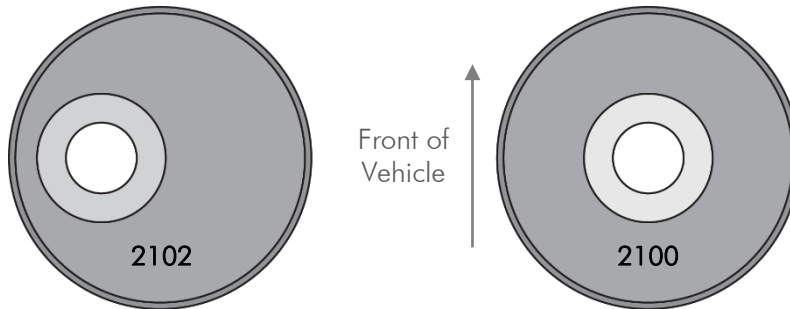

Kit #2102K – To counteract a strong pull left
Passenger's side castor increase and driver's side castor decrease

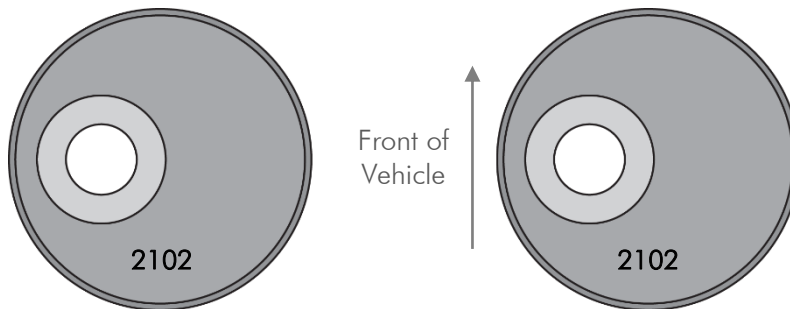

Kit #2102K – Performance Settings
Increase castor on both sides

