## Fitting Instructions #3201IS

## **Subaru WRX**

## **Differential Support Bracket Mount Kit (Rear)**

- With the vehicle on jack stands, remove the differential to gain access to remove the old bushings.
- Remove the original bushes, including the shell, by using a hacksaw to cut through the shell being careful not to damage the subframe. Chisel bushes out then remove any burrs created with a file.
- Ensure that the grease supplied is used on all mating surfaces during assembly and install the bushes, with the orientation as it is shown in the picture to the right see FIG 2
- NOTE: The bushings are stamped "FRONT" on the leading
  edge ensure this faces the front of the vehicle see FIG 3
- Use threaded rod and suitable sized sleaves to pull the bushes into place.
- Refit the differential
- Ensure that all bolts are tightened to the manufacture's specifications.



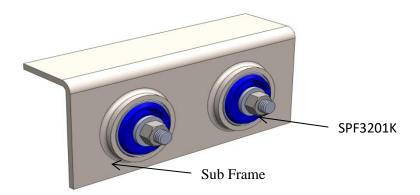




FIG 2 Maintain orientation as shown

