

Fitting Instructions #5305IS

Ford Falcon AU IRS

Rear shock top mount bushing kit



1. With the vehicle safely supported on a hoist
2. Remove the rear strut assembly
3. With the aid of a spring compressor disassemble the strut and separate the top mount assembly.
4. If the OE bushes have deteriorated significantly, they may just fall out otherwise use an arbour press or similar to remove the bushes.
5. Clean up housing and apply a thin coat of assembly grease to the top mount where the bushes locate.
6. Using the diagram below as a reference assemble the bushes into the mount followed by the crush tube see Fig 1.
7. Reassemble spring onto strut then place a washer over the shock shaft so it locates on the step then slide the top mount assembly over the shaft followed by another washer compress the spring re use the OE nut and tension into place.

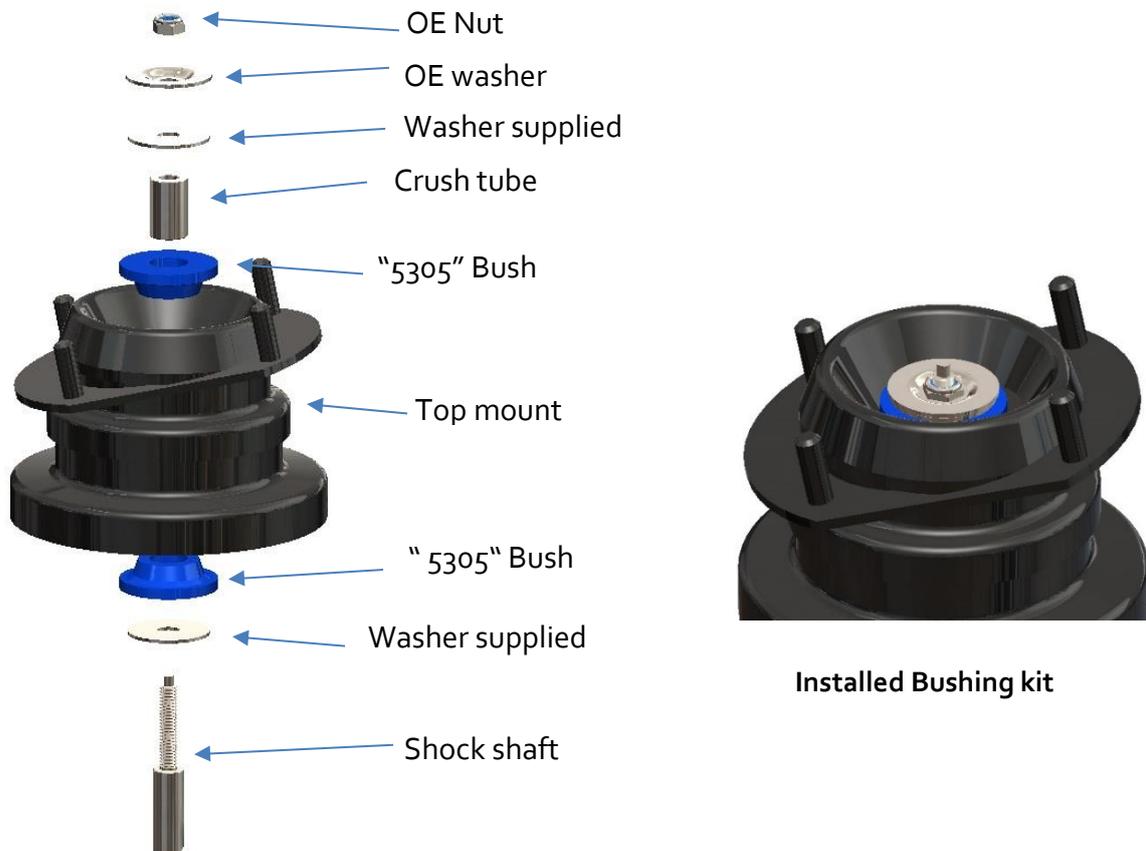


Fig 1