

Fitting Instructions #1714IS

Mitsubishi Evo / Lancer

Control Arm Lower Inner Rear Kit



During assembly, ensure all metal that makes contact with polyurethane is well greased.

Photo 1 – Shown in picture: Left hand side control arm, original nut and “D” washer, offset SPF2026 bush (with crush-tube inserted), supplied washer (flat).



Photo 2 – Kit is assembled onto arm in order: supplied washer, bush (note that protruding section faces front), original “D” washer, and original nut.




Photos 2 & 3 – When fitting to Lancer Evo, as the nut is tightened, the supplied washer will be cupped to match the profile of the bush.

Sketch – To increase caster*, press in the bushes ensuring that the offset is oriented towards the outside of the vehicle.

Driver’s side caster may be decreased when required to correct steering problems created by road camber.


Towards out side of the vehicle.

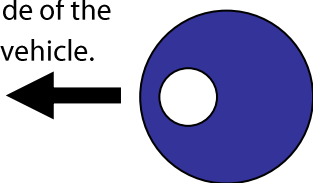

Passenger’s Side

SPF2026K

Towards out side of the vehicle.

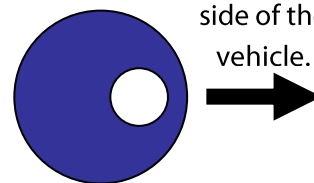

Driver’s Side