

Fitting Instructions #2955IS

Mazda 6 GG, GY 2002-2008

Lower Shock Absorber To Control Arm Bush (Front)

Note: Polyurethane bushes must be fitted to both sides of the vehicle.

- Jack the vehicle up and support on stands/hoist and then, remove the front lower control arms from the vehicle.
- Remove original bushes including the shell from the housing with the use of a hydraulic press and suitable pressing tools.
- Clean housing areas to remove any old original bushing materials. Then, install the new polyurethane bushes into the housing with reference to Figure 1.
- Using the grease supplied, generously lubricate the outside of the steel crush tube, the bore of the new bush and then, push the crush tube in.
- Install the supplied steel washers over the crush tube (Refer Figure 2).
- Refit the front lower control arms to the vehicle.
- Tighten all bolts ensuring that you use manufacturers torque settings, wheel align vehicle.

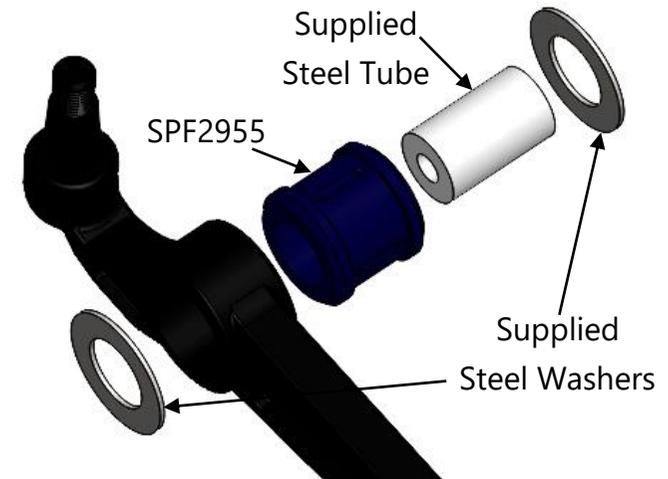


Figure 1: Bushing Orientation



Figure 2: Bushing Installed