


## Fitting Instructions #0022IS

### Universal fitting instruction for cotton reel bushes

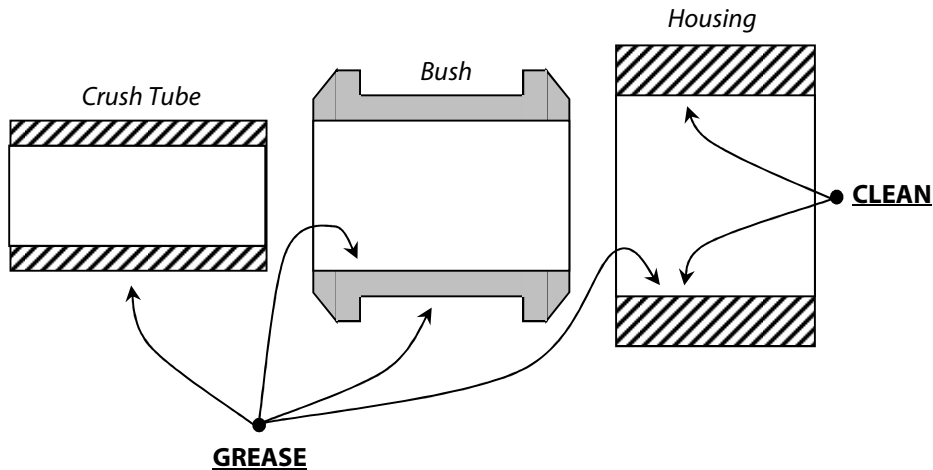

- For ease of installation and correct positioning of Polyurethane bushes:
- Remove rubber bush and clean all traces of rubber from the housing;
- Grease the inside of the bush housing. Grease the outside of the bush, and then press bush into housing;
- Grease the inside of the bush, grease the outside of the crush tube, then press tube into the bush;
- Grease each end of the bush and mating metal components.
- Note: All surfaces of bushing that contact metal should be greased.



## Fitting Instructions #0022IS

### Universal fitting instruction for cotton reel bushes



- For ease of installation and correct positioning of Polyurethane bushes:
- Remove rubber bush and clean all traces of rubber from the housing;
- Grease the inside of the bush housing. Grease the outside of the bush, and then press bush into housing;
- Grease the inside of the bush, grease the outside of the crush tube, then press tube into the bush;
- Grease each end of the bush and mating metal components.
- Note: All surfaces of bushing that contact metal should be greased.

