

Fitting Instructions #2037IS

Nissan Pathfinder / Elgrand

Front Lower Control Arm Bushing Kit

Note: Polyurethane bushings must be fitted to both sides of the vehicle.

- Wheel-align the vehicle before the job is started and note settings;
- Jack the vehicle up and support on jack stands/hoist;
- Remove the lower control arms;
- Remove original bush from the arm;
- Generously lubricate the outside of the control arm peg and the bush bore, then push the control arm into the bush, as shown in the Figure 01. With reference to the diagrams and the settings required, Page 02, fit each bush into their respective position;
- Refit the control arms to the vehicle and tighten all bolts to manufacture's torque settings and carry out wheel alignment.


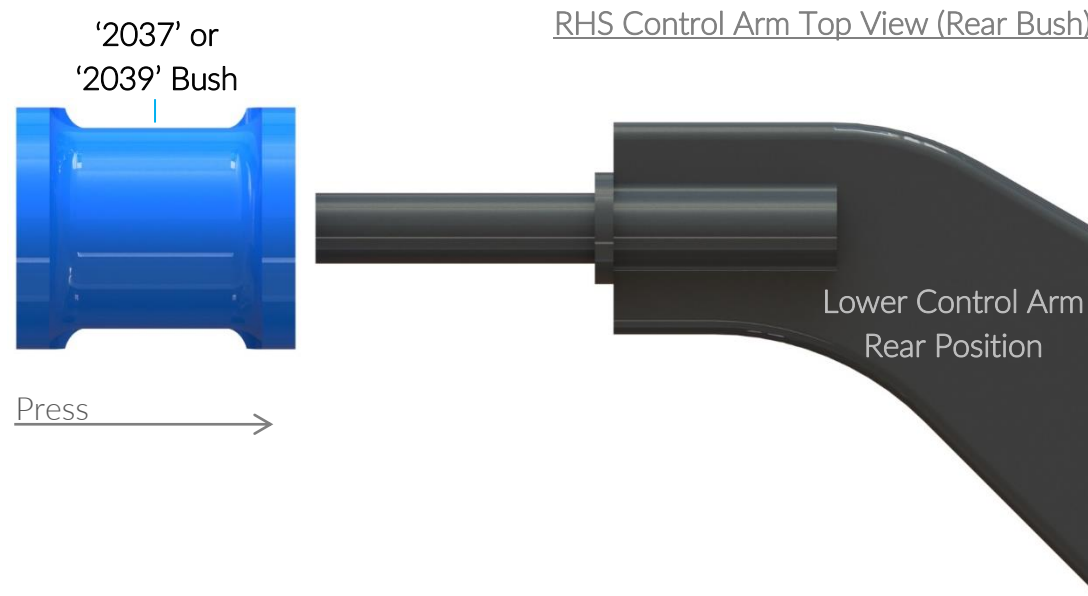


Figure 01 – Front Lower Control Arm Rear Bush Installation


Fitting Instructions #2037IS

As viewed from the rear of the control arm

Kit SPF2037K – Standard Replacement.
No caster change.

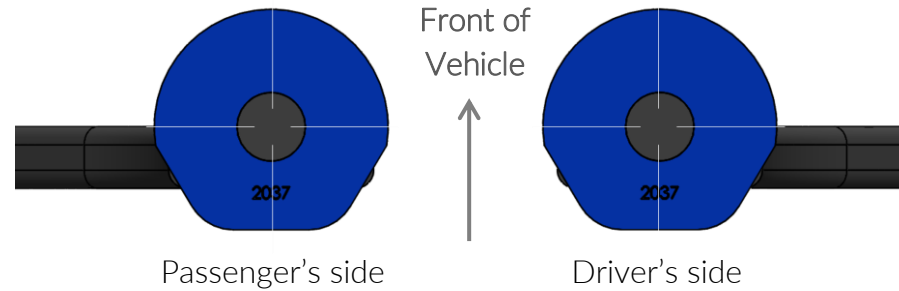

Kit SPF2038K – Single Offset.
Passenger's side caster increase.

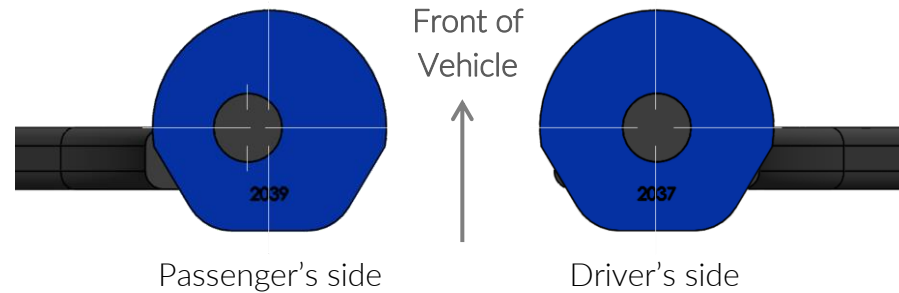

Kit SPF2039K – Double Offset.
Passenger and Driver's side caster increase.

