


Fitting Instructions #2339EIS

Holden Commodore VT/ VX / VU (Ute) / VY

Strut Bar to Chassis Mount Kit

- Jack front of vehicle and support body on stands;
- Undo strut bar nut and the four retaining nuts from the cross member;
- Remove old strut bar bush and discard it;
- Assemble the '4977A' and '4977B' bushes with the steel plate and crush tube, as shown in Figure 01;
- Using the white grease provided, lubricate the internal bore, crush tube, and end faces of the bush;
- Fit new replacement bush to strut bar;
- Repeat previous procedure for the other side of the vehicle;
- A wheel alignment is recommended after fitment of the bushes.

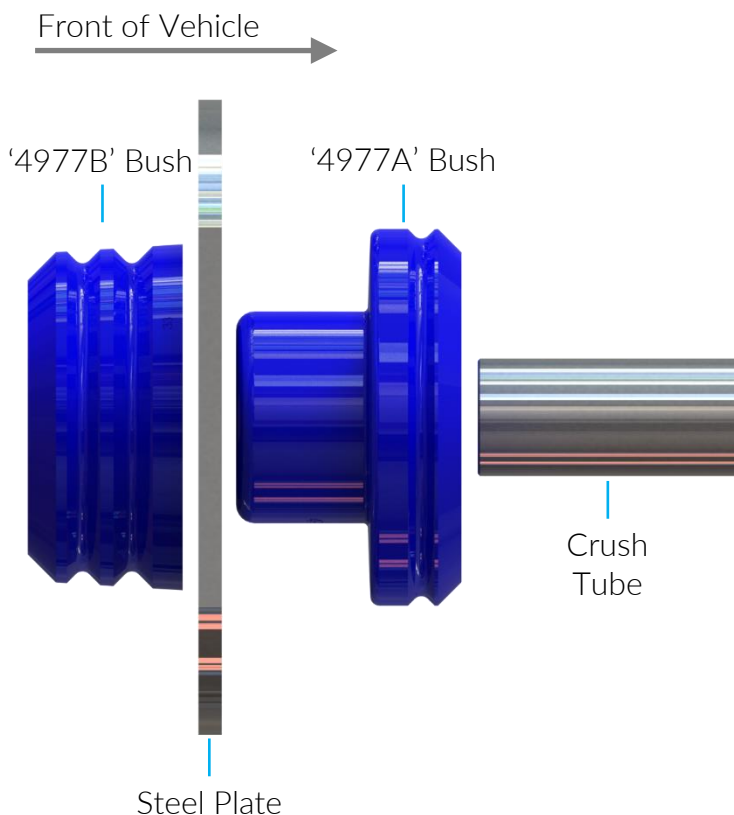

Kit Content:

- ✓ Two '4977A' Bushings;
- ✓ Two '4977B' Bushings;
- ✓ Two Steel Plates;
- ✓ Two Steel Tubes;
- ✓ Four large Flat Washers;
- ✓ One silicon grease sachet;
- ✓ One Fitting Instruction Sheet.

Figure 01 – Bush Installation

Important:

- If RHS strut bar has a factory castor spacer, it should be retained when fitting.