

Fitting Instructions #TRC0048IS



LDV T60 2021-On

Centre Bearing Kit



- o This kit helps to reduce driveline vibration in a 2" lifted vehicle
- o Remove original centre bearing fasteners;
- o Fit the kit as per picture below – 1x 8mm and 1 x 4mm spacer on top, 1 x 8mm and the supplied fasteners on the bottom;
- o Drop loctite on the thread and tighten the bolt to manufacturer’s specification;
- o Test Drive and Adjust spacer position as required;

Note: image may not resemble vehicle in question and is for demonstration purpose

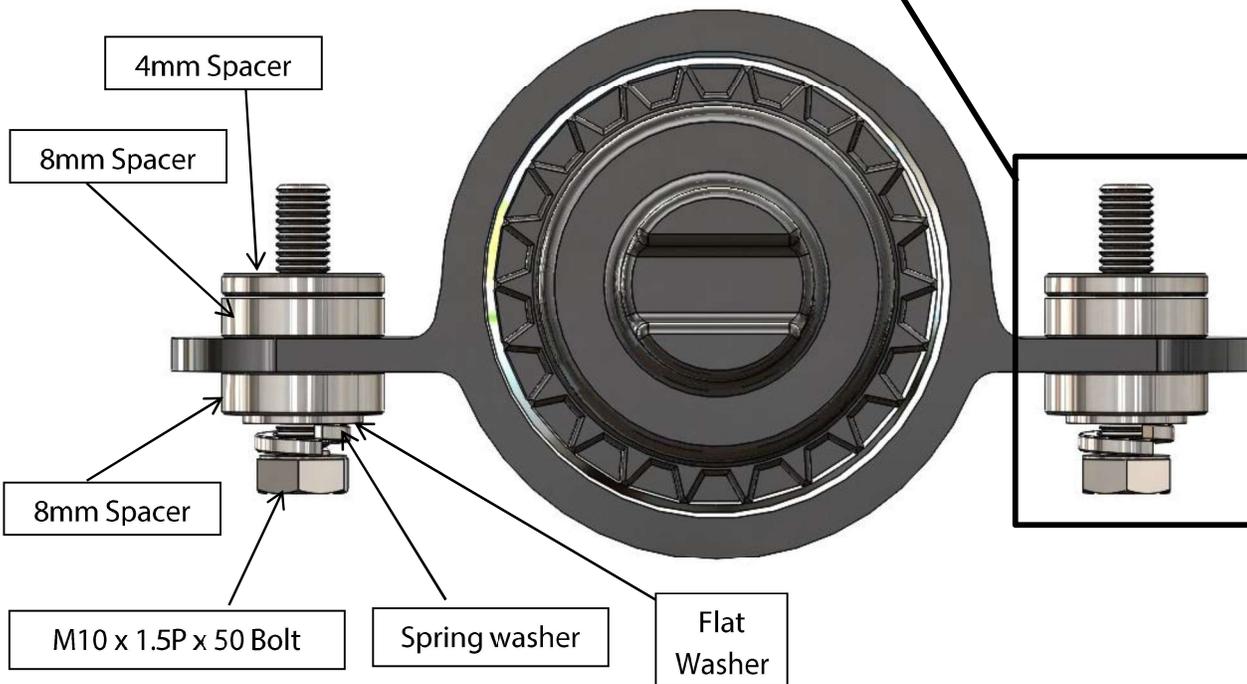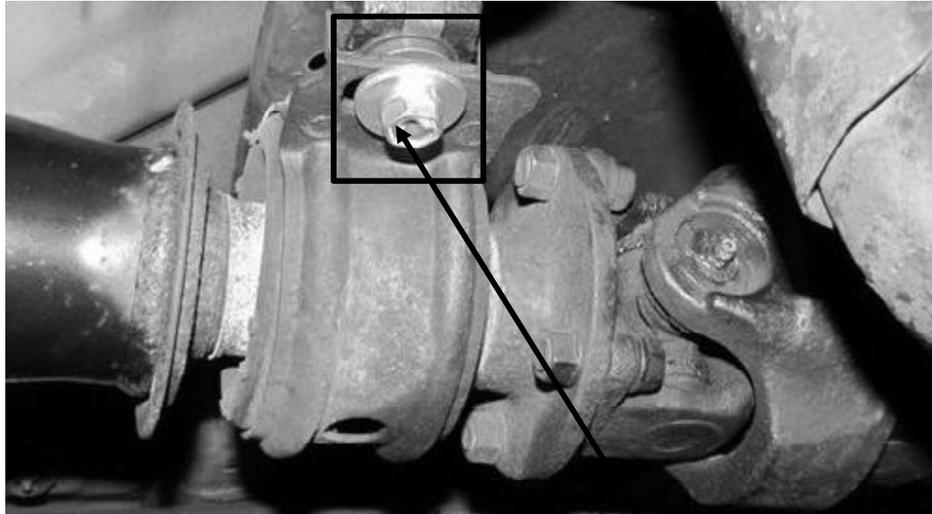

Kit Contents

2 x M10x1.5Px50 Bolt; 2 x M10 Spring Washer; 2 x M10 Flat Washer; 2 x 8mm Spacer; 4 x 4mm Spacer