

Fitting Instructions #5422IS


Renault Megane III

Front Control Arm Lower Rear Bushing




Note: Polyurethane bushes must be fitted to both sides of the vehicle.

- Wheel-align the vehicle before the job is started and note settings;
- Jack the vehicle up and support on jack stands;
- Remove the lower control arms;
- Remove original shell parts from the rear housing with the use of a hydraulic press and suitable pressing tools;
- Then push the new polyurethane bushing with the shell into the housing with the adjustment ring facing upwards;

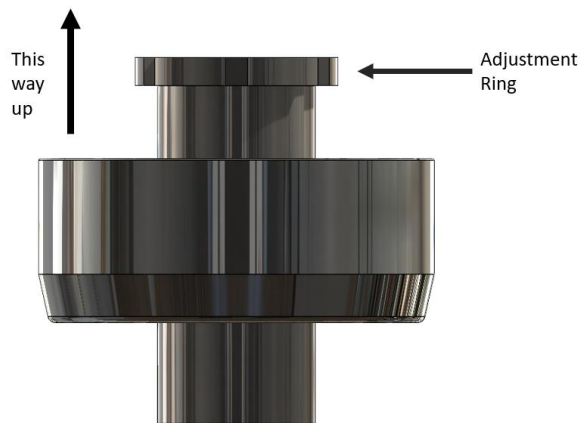

- Refit the control arm to the vehicle.
- For standard replacement, use the centre hole when re-installing.
- For caster adjustment, use the outer hole.

For maximum caster, the offset hole should be pointed inwards, pushing the arm out.
For minimum caster, the offset hole should be pointed outwards, pulling the arm in.

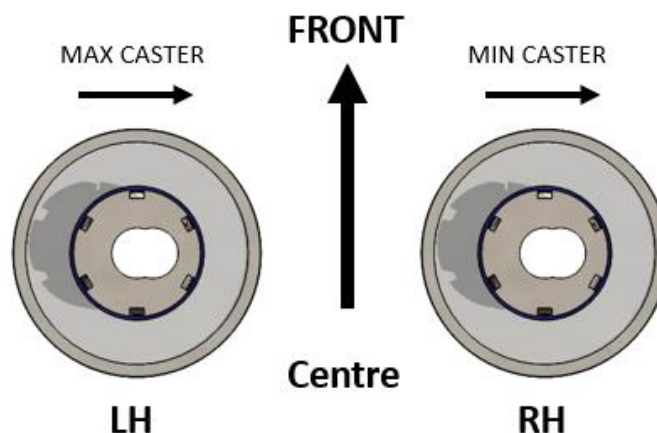

- Tighten all bolts to manufactures torque settings;
- Carry out wheel alignment. The adjustment ring helps to fine tune the caster.