


Fitting Instructions #5798IS

Holden Commodore VR-VE + VF models

Front Strut Bolts & Upper Nut

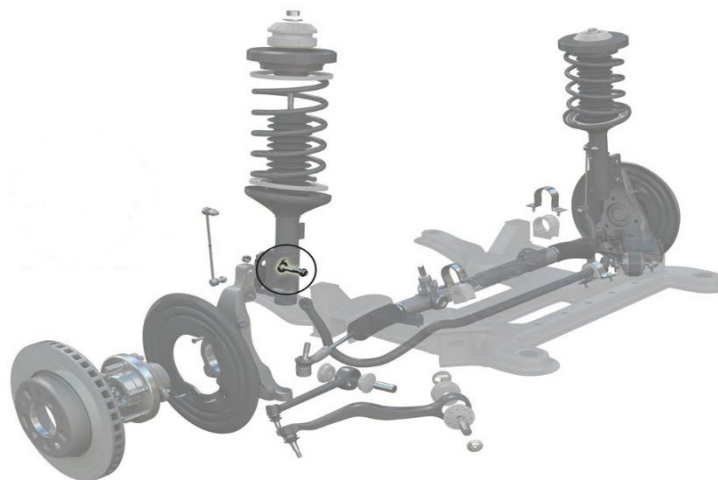

Contents: 2x new lower strut bolts
2x new lower strut nuts
1x new upper shock shaft nut

(Note: 2 kits are required for both sides of vehicle. As there are 2 different part numbers, refer catalogue for correct listing for your vehicle)

Super Pro new replacement strut bolts and nuts replace the original torque-to-yield items. In addition, offering a new upper shock shaft nut.

For re-assembly of spring + strut, use the new supplied thin nut above the strut top (under the droop plate). Tighten to 55Nm

For re-fitment of strut to vehicle, use the new supplied bolts and thick nuts.

IMPORTANT – a wheel alignment will be required after install. Once camber is fine-tuned via the small hub bolt, tighten the new nuts and Bolts to 90-100Nm, plus an additional 90 degrees of the ratchet.