

Fitting Instructions #ALOY0017IS

Subaru WRX

Front Lower Control Arm Complete Replacement

Note: ALOY0017 arms must be fitted to both sides of the vehicle.

- Wheel align the vehicle before the job is started and note caster settings;
- Place vehicle on hoist;

Note: The kit comes as a complete arm replacement assembly with the front and rear bushing installed. The subframe doesn't need to be removed or lowered.

- Remove the front bush bolt, detach the arm from the ball joint on the hub and sway bar link, remove the rear bush bracket and then remove the OE lower control arm;
- Install the left and right hand side control arms to the car with the reverse procedure used to remove the OE arms;
- Torque all mounting bolts to manufacture's specifications with the vehicle at ride height;
- Wheel align vehicle and check caster settings.



Figure 01 – View from underneath of the vehicle - Right Hand Side Control Arm assembly installed

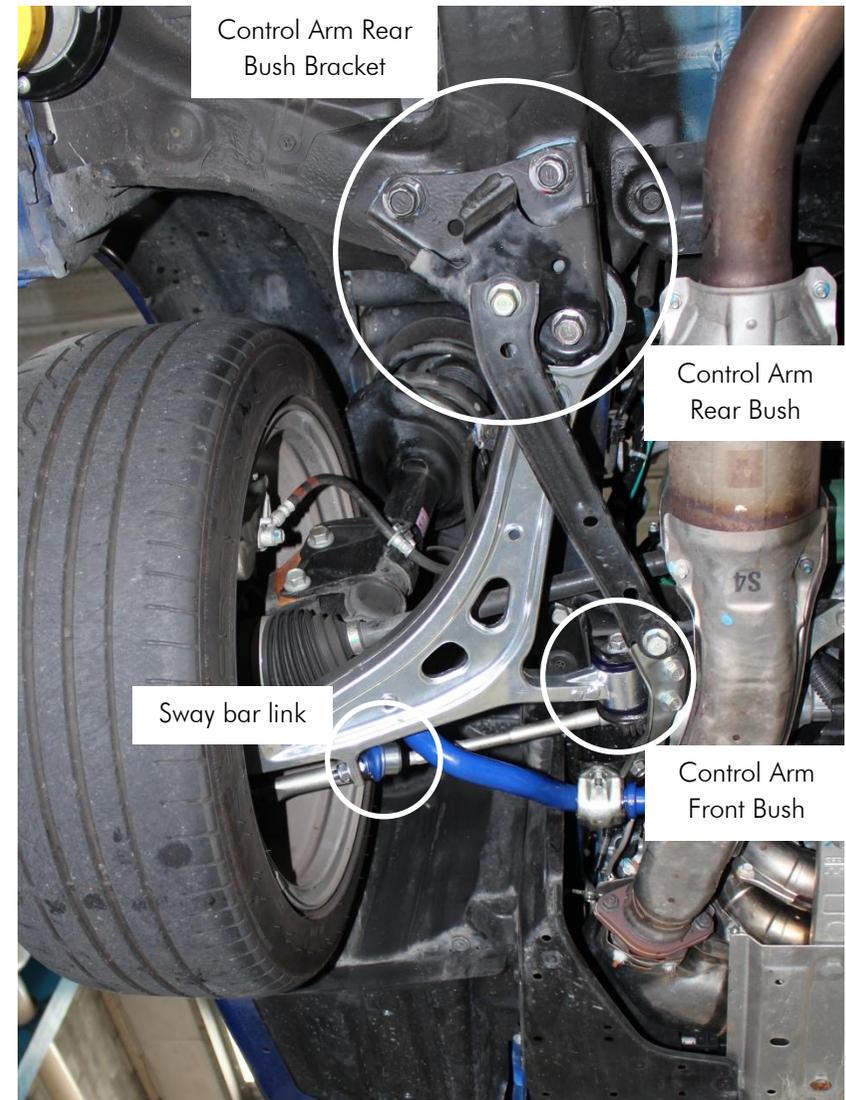


Figure 02 – View from underneath of the vehicle - Right Hand Side Control Arm assembly installed