


Fitting Instructions #3801IS

Ford Ranger PX 1/2/3





Front Differential Mount Bush Kit – Right Side

- With the vehicle on jack stands/hoist, support the front diff with an adjustable stand or similar, then proceed to remove the Right-Hand Shock Absorber and CV shaft;
- To remove the original bush in place, carefully move the diff towards the front of the vehicle until you gain access to fit a press tool assembly to draw the bushes out. Alternatively, use a reciprocating saw to cut the inner rubber and remove the inner tube, then cut the outer shell and use an air chisel to force it out of the housing;
- Clean housing surface to remove any old original bushing materials;
- Apply the grease supplied to the housing bore, outside and inside surfaces of the bushes and the outside of the steel crush tubes;
- Install the new bushes according to the image below;

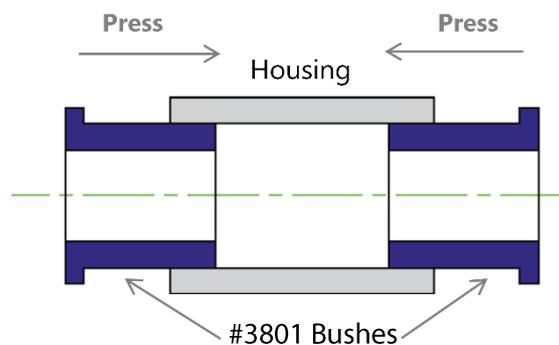

- Refit the Right-Hand Shock Absorber and CV Shaft;
- Ensure that all fasteners are torque according to the manufacturer's settings;
- Recheck all bolts after 1000km or 1 month.

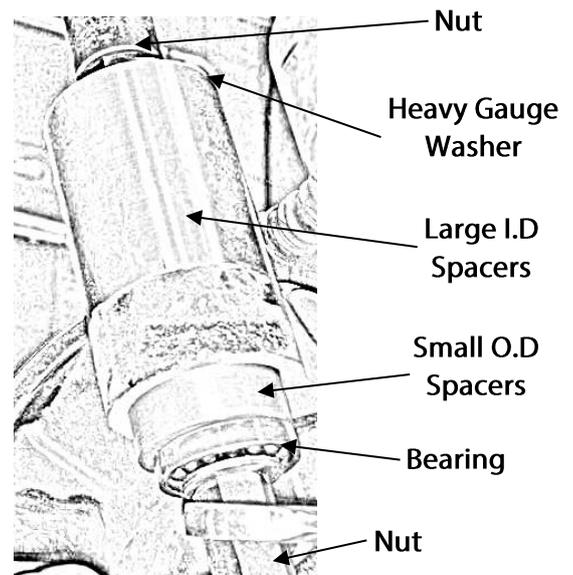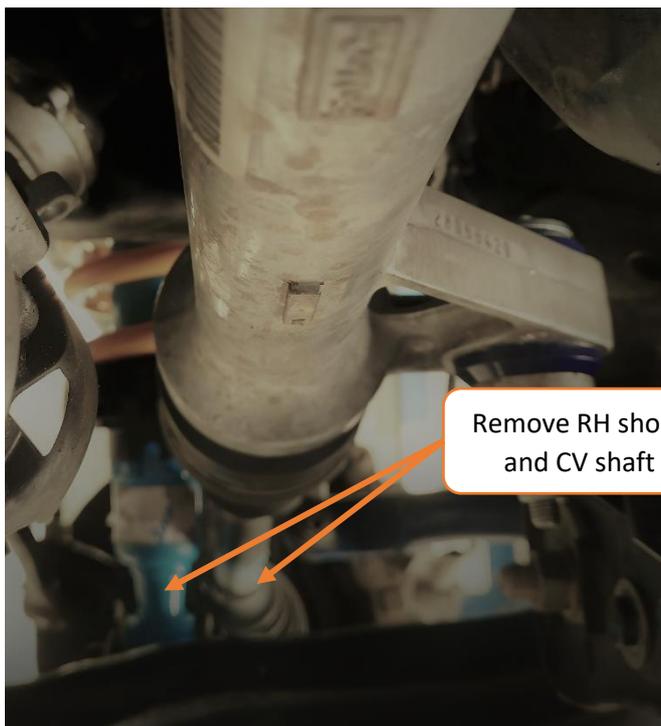

Example of Bush Removal using press tool