


## Fitting Instructions #4431IS

Range Rover

Rear Sway Bar Mount Bushing



- With the vehicle on jack stands/hoist, remove the sway bar brackets;
- Note the position of the original bushes and remove them, cleaning any left bush material;
- Apply the supplied grease on the inner and outer surfaces of the new SuperPro '4431' bushes and install them;
- Refit the brackets and tighten all the bolts to the manufacturer's torque settings.

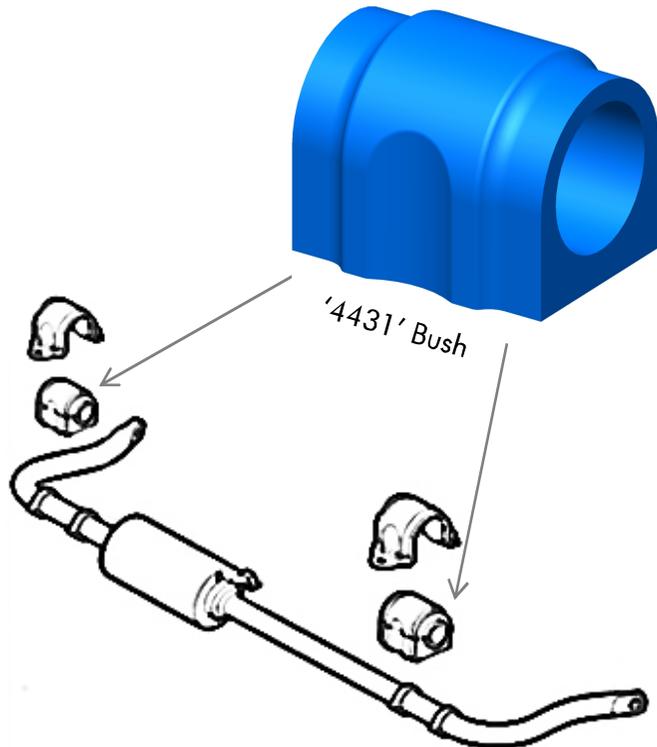

## Fitting Instructions #4431IS

Range Rover

Rear Sway Bar Mount Bushing



- With the vehicle on jack stands/hoist, remove the sway bar brackets;
- Note the position of the original bushes and remove them, cleaning any left bush material;
- Apply the supplied grease on the inner and outer surfaces of the new SuperPro '4431' bushes and install them;
- Refit the brackets and tighten all the bolts to the manufacturer's torque settings.

