

Fitting Instructions #ALOY0021IS

HOLDEN CRUZE JG, JH

Front Lower Control Arm Complete Replacement

SuperPro
Suspension Parts




View of underside of car right hand side shown with arm assembly installed

Note: Front Lower Control Arms Kit must be fitted to both sides of the vehicle.

- Wheel align the vehicle before the job is started and note castor settings;
- Place vehicle on hoist and carefully remove the OE front lower control arms;
- Clean chassis areas to remove any old original bushing materials. Grease the faces of the front bushes and install the new ALOY arm into the vehicle;
- Re-use all OE fasteners, making sure that all brake hoses are attach nicely on the new control arm and torque to manufacturer's specification;
- Wheel align vehicle and check castor settings;

Drivers side arm assembly diagram

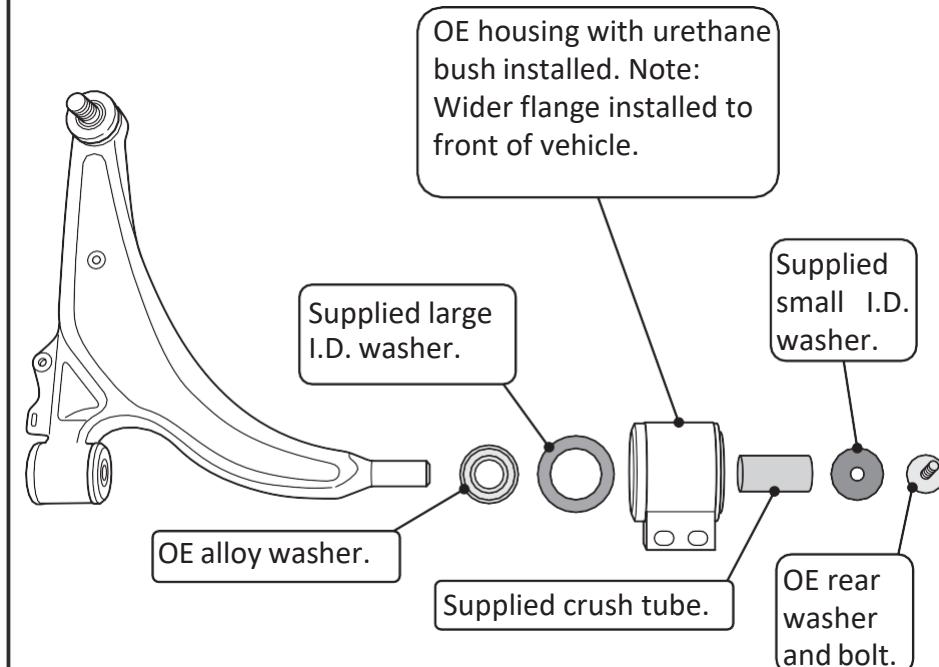

Crush tube note:

One end of crush tube I.D. is tapered. The tapered end of the crush tube must be installed toward the front of vehicle.