

Fitting Instructions #TRC1138BKIS



Toyota Landcruiser 300 series

Rear Ride Height Sensor for TRC1138



NOTE: This product is to be installed with TRC1138 on vehicles with factory rear air suspension.

1. The bracket can be installed once the factory arm is removed from the vehicle.
2. Place one of the TRC1138 and the OE arm side by side on the ground.
3. Set the length of the adjustable arm to the same as the OE arm initially.
4. Loosely install the bracket onto the arm, and ensure that the orientation is correct.
5. Align the bracket with the OE bracket.
6. Tighten the 2x M6 bolts to clamp the bracket around the arm. Ensure that the bolts are clamped down evenly so the gap on each side of the bracket is roughly the same and tighten to about 10Nm (7.5 ft. Lbs).

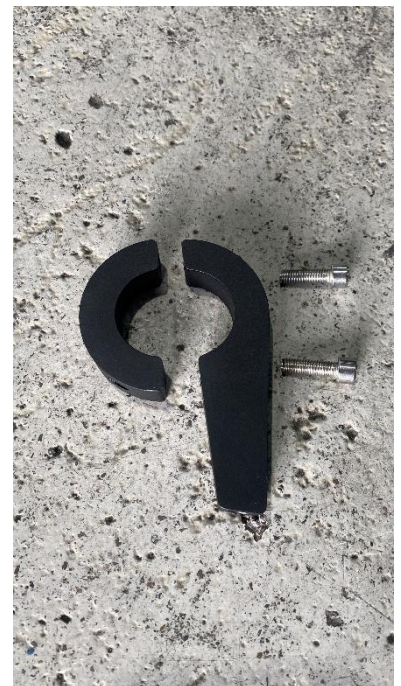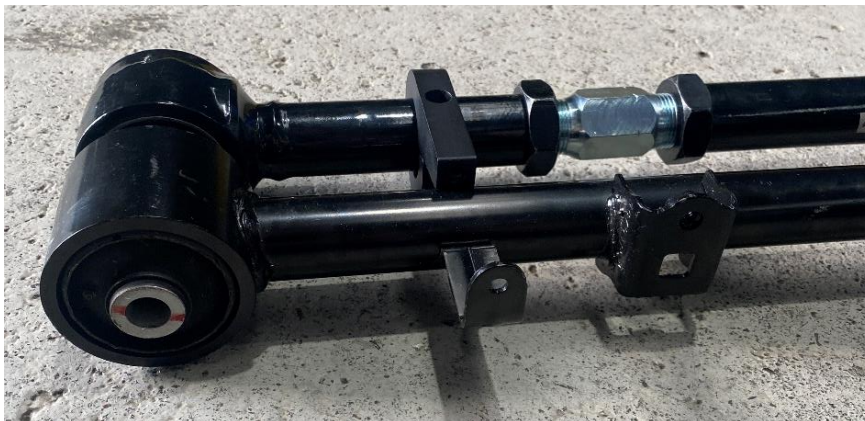

7. Install the new arm into the vehicle re-using the OEM bolts.
8. Thread the headlight sensor linkage into the threaded hole on the new bracket and tighten it down until it's flush with the bracket.
9. Repeat the process for the other arm.