


Fitting Instructions #ALOY4343IS

Volkswagen Passat

Front Lower Control Arm Rear Bush

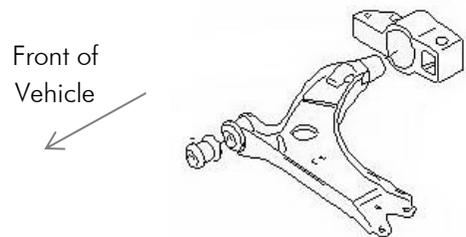

Note: New ALOY4343 brackets must be fitted to both sides of the vehicle.

- Wheel align the vehicle before the job is started and note caster settings;
- Place vehicle on hoist and remove OE control arms;
- Lubricate the centre of the new rear bushes. Note it will have 4343L or 4343R cast into the bush itself and is part of the aluminium housing assembly;
- Push 4343L over the end of the OE arm ensuring that it bottoms out on the spigot and rotates freely; see Figure 01 and Figure 02. This will become the left hand control arm – repeat for the right hand side;
- Fit the control arms to the car note 4343L is for the left hand side and 4343R is for the right hand side of the car, Figure 03;
- Wheel align vehicle and check castor settings;
- Torque all mounting bolts to manufacturer's specifications with the vehicle at ride height.

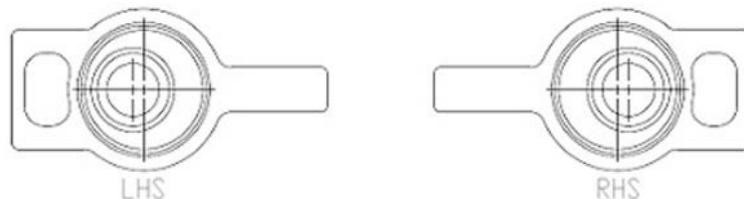


Figure 01 - Schematic drawing of brackets viewed from the back of car looking towards the front. Note offset position of the brackets



Note: bushing comes complete with housing left hand shown



Lubricate bushing assembly

Figure 02 – Brackets installation



Figure 03 - View of underside of car right hand side shown with arm assembly installed