


Fitting Instructions #2318IS

Honda Civic

Rear Control Arm Lower Inner Rear Bushing

Note: Polyurethane bushings must be fitted to both sides of the vehicle.

- Wheel-align the vehicle before the job is started and note settings;
- Jack the vehicle up and support on jack stands/hoist;
- Remove the rear lower control arms;
- Remove original bushes from the housing with the use of a hydraulic press and suitable pressing tools;
- Clean all the remaining OE bush material;
- Apply the white grease supplied into the bore of the bush, and the outside of the crush tube;
- Push the new polyurethane bushing into the housing as shown in the illustration;
- Refit the control arm to the vehicle and tighten all bolts to manufacture's torque settings.
- Carry out wheel alignment.

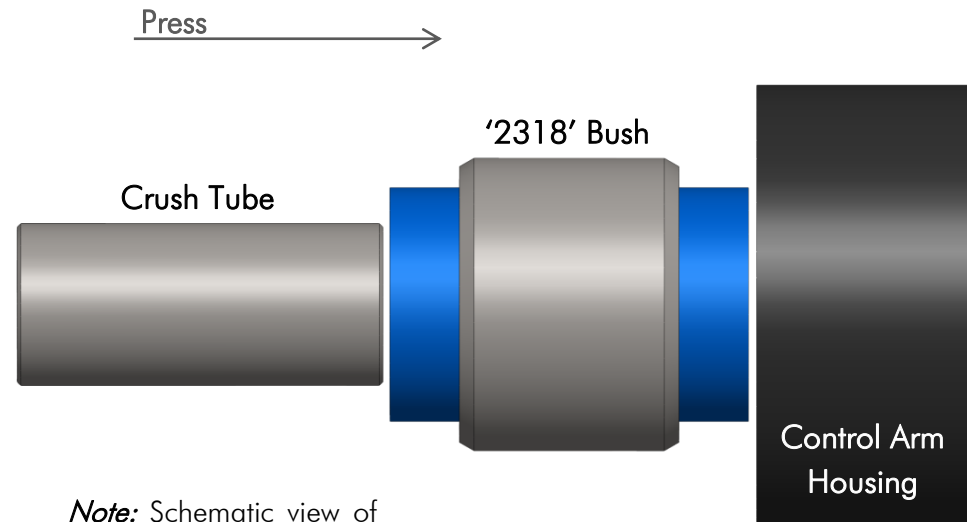

Note: Schematic view of housing only.

