


# Fitting Instructions #3570IS

Holden Commodore VX, VY

Front Sway Bar Link Rod Kit

---

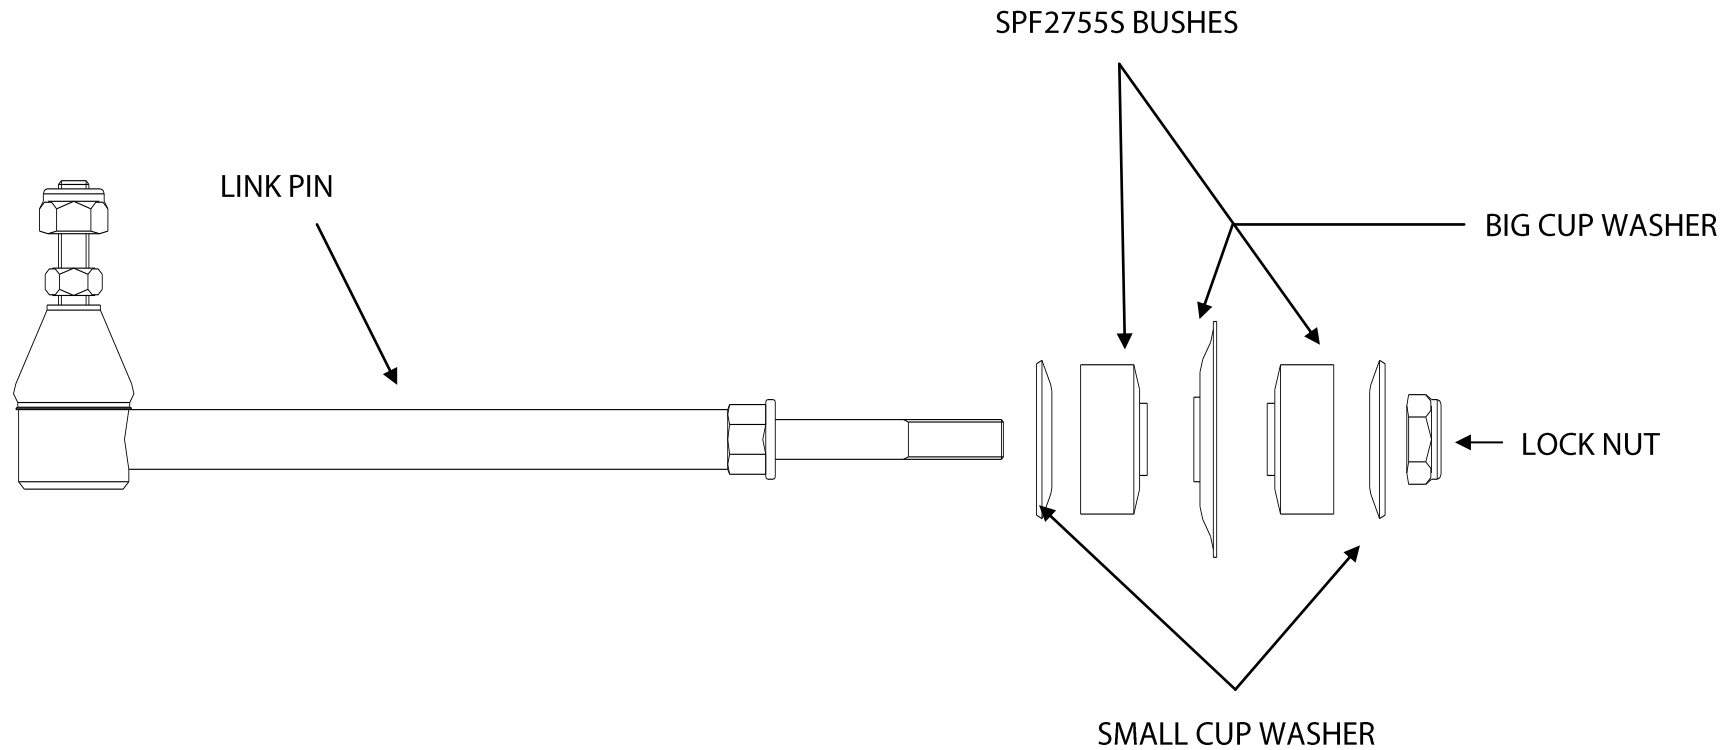

**\* NOTE ORIENTATION OF WASHERS**