


Fitting Instructions #4463IS

Volkswagen Amarok

Steering Rack & Pinion Mount Bushing



- Jack/hoist the vehicle up and support on jack stands, remove the under covers;
- Remove the steering rack, cross member and rear engine mount bolts. Disconnect ball joints and remove cross member;
- Push the original bushes out from the rack. These are rubber encapsulated and are easily removed with any pressing tool;
- Using emery tape clean any bur marks. Wipe clean with a rag and apply the grease to the new bushes, crush tube and the rack;

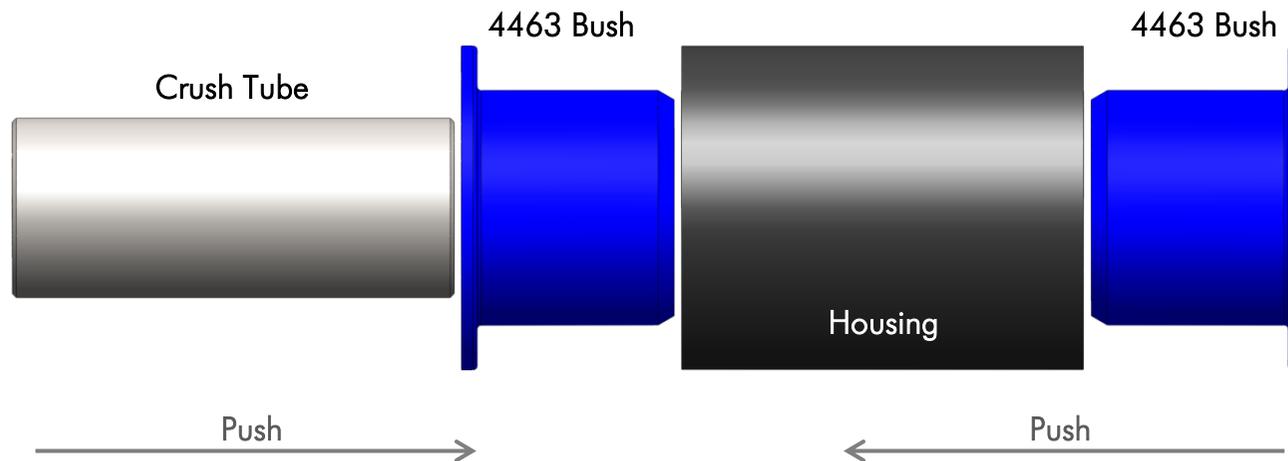

- Noting the position of the bushes in the above diagram push in the new bushes by hand and using multi grips or similar push in the metal crush tube;
- Refit the steering rack, cross member, vehicle under covers and all mounting bolts removed and torque too manufacturer's specifications;
- Wheel align vehicle.